

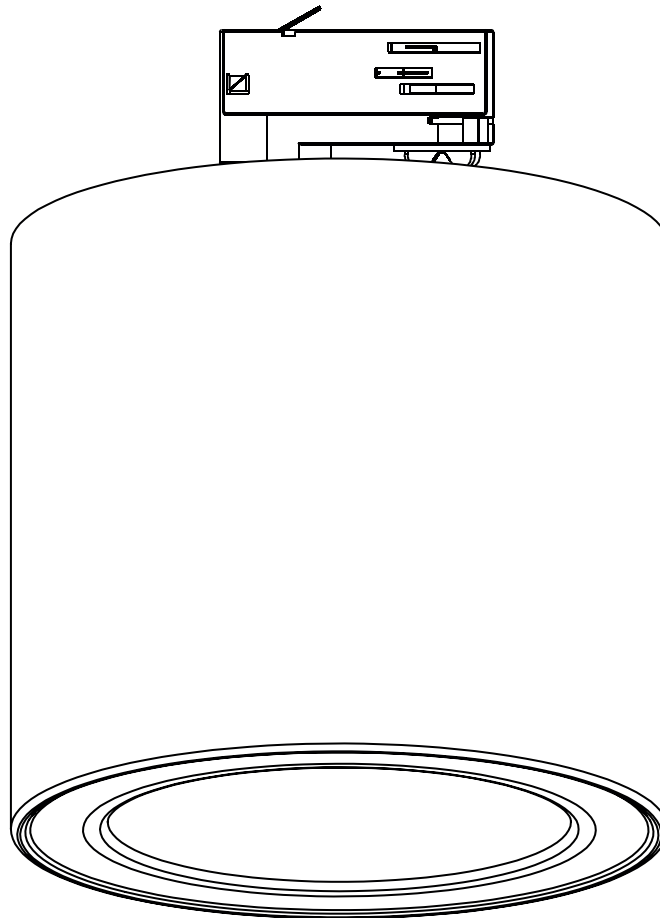
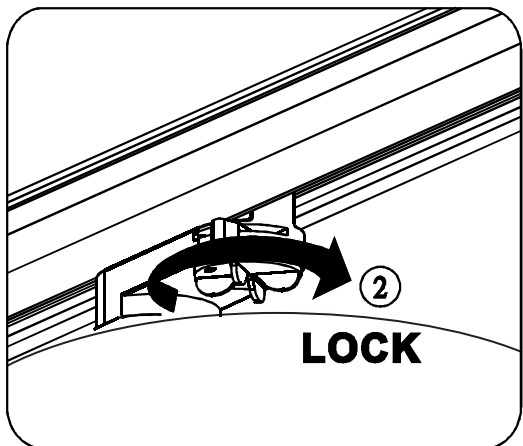


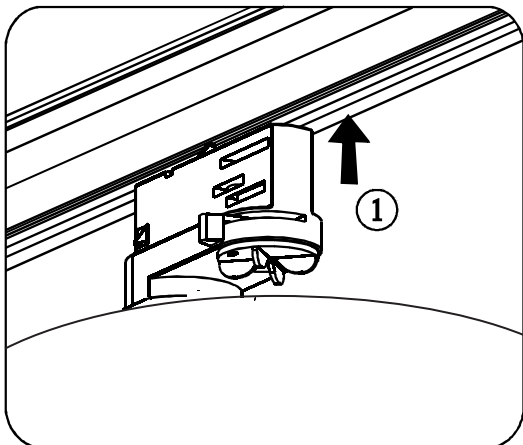


## Cautions

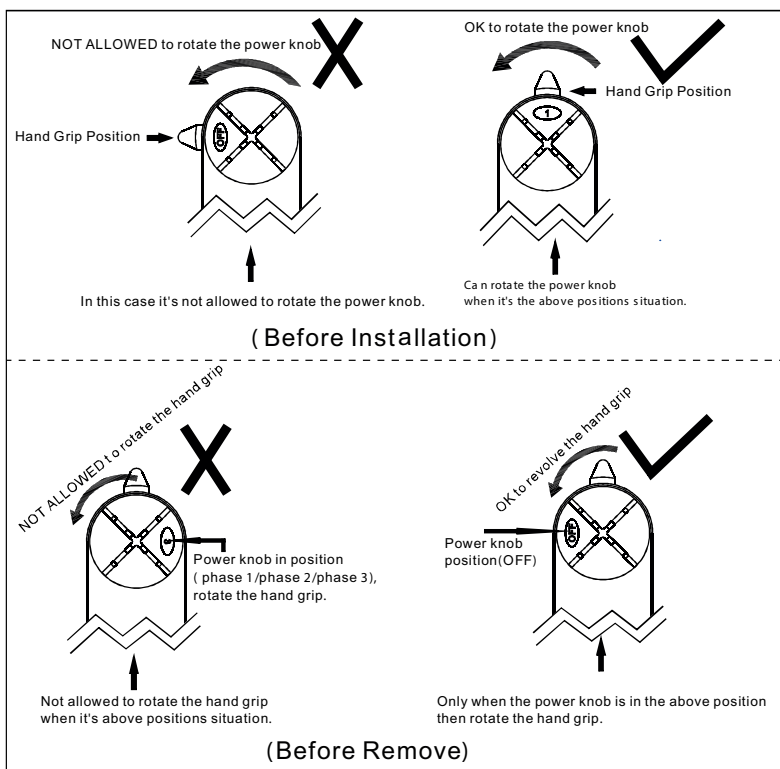

1. Make sure the positions are exactly the same as the picture shows before installation.

Power knob (off position)

Handgrip →

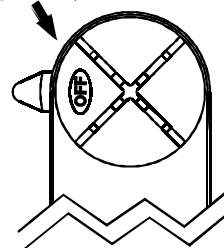

2. The adaptor flange must be in the same direction as the track plane.

