

QL Company Induction Lighting Systems

Information for Original Equipment Manufacturers



Contents

1. INDUCTION LAMP SYSTEMS IN GENERAL 3

1.1 INTRODUCTION	3
1.2 LAMP SYSTEM TECHNOLOGY AND OPERATION	3
1.2.1 Operating principle	3
1.2.2 Lamp system components	4
1.2.3 The lamp	4
1.2.4 The power coupler	4
1.2.5 The dimmable HF generator	5
1.3 NOMENCLATURE	5

2. LUMINAIRE DESIGN..... 7

2.1 INTRODUCTION	7
2.2 POSITIONING OF COMPONENTS.....	7
2.3 EARTHING AND FIXATION	7
2.4 GENERAL WIRING	7
2.4.1 Power supply wiring (class I)	8
2.4.2 Power supply wiring (class II)	8
2.4.3 HF output wiring (class I + II)	8
2.4.4 Control line wiring	8
2.4.5 Strain relief.....	9
2.5 TEMPERATURE MEASUREMENTS	9
2.5.1 General	9
2.5.2 Permissible temperatures and lifetime HF generator..	10
2.5.3 Permissible temperatures of power coupler	10
2.5.4 Permissible temperatures of amalgam	11
2.5.5 Heat sink design	11
2.6 EMC MEASUREMENTS.....	12
2.6.1 EMC measurements with QL generator	12
2.7 LAMP	12
2.7.1 Exposure limits	12
2.7.2 Damage factor	12
2.7.3 Application	13
2.7.4 Lamp holder / lamp base.....	13

3. GUIDELINES FOR THE INSTALLATION OF QL LUMINAIRES 14

3.1 EARTH LEAKAGE CIRCUIT BREAKERS	14
3.2 INRUSH CURRENT.....	14
3.3 TESTING THE INSTALLATION	15
3.4 AMBIENT LUMINAIRE TEMPERATURES AND OPTIMUM QL LAMP SYSTEM LIFETIME.....	15
3.5 ON/OFF SWITCHING	15

4. LAMP OPERATION 16

4.1 STARTING CHARACTERISTICS	16
------------------------------------	----

4.1.1 Ignition and lifetime performance.....	16
4.1.2 Luminous flux during starting period.....	16
4.1.3 Lumen maintenance	16
4.2 BURNING POSITION	16
4.3 OPTICAL DESIGN	16
4.3.1 Relationship of luminous flux, system wattage, amalgam and ambient temperature	17
4.4 LUMINOUS FLUX VERSUS AMBIENT TEMPERATURE	17
4.5 DIMMING	18

5. QL LAMP SYSTEM SPECIFICATIONS 19

5.1 MECHANICAL CHARACTERISTICS	19
5.2 ELECTRICAL CHARACTERISTICS	21
5.3 LIGHT PERFORMANCE CHARACTERISTICS	22
5.3.1 Luminous flux.....	22
5.3.2 Efficacy.....	22
5.3.3 Luminous intensity diagrams	23
5.3.4 Color characteristics.....	26
5.3.5 Effect of supply voltage fluctuations.....	26

6. LIGHTING INSTALLATION & ENVIRONMENT ... 28

6.1 ELECTROMAGNETIC COMPATIBILITY	28
6.1.1 Immunity	28
6.2 HUMIDITY.....	28
6.3 INTERFERENCE WITH INFRARED REMOTE CONTROL EQUIPMENT	28
6.4 STANDARDS AND APPROVALS	28
6.5 IP CODES; DUST AND MOISTURE PROTECTION.....	29
6.6 LAMP SYSTEM DISPOSAL	29
6.6.1 The lamp	29
6.6.2 The power coupler.....	29
6.6.3 The HF generator	29

7. SERVICE 30

7.1 GENERAL	30
7.2 LUMINAIRE MEASUREMENT	30

QL LUMINAIRE MEASUREMENT REQUEST 31

QL LUMINAIRE MEASUREMENT REQUEST FORM 32

QL INDUCTION LUMINAIRE DESIGN CHECKLIST 33

EMPIRICAL APPROACH DESIGNING A LUMINAIRE..... 34

TROUBLESHOOTING GUIDE..... 35

1. General information on QL Company induction lamp systems

1.1 Introduction

The QL lamp systems use a unique physical principle of light generation. This lamp system is therefore classified in a new family of sources, the QL induction lamp systems.

QL induction lighting is a breakthrough for professional, general and special lighting applications; not only because of its high luminous efficacy and excellent light quality, but especially because of its unprecedented lifetime. System lifetime is rated at 80,000 hours, or about 20 years (based on 4000 burning hrs/year) in many applications, with a failure rate of less than 10%. Average lifetime with 50 % survivals is rated at 100,000 hrs. With this unmatched durability, QL offers substantial savings in direct maintenance costs, as well in indirect costs. The major features of QL lamp systems, and their related benefits for the user, are:

Features:	Benefits:
No electrodes or filaments	
<ul style="list-style-type: none"> ultra long life time of < 10 % failure rate at 80,000 hrs low lumen depreciation of < 30 % at 80,000 hrs low operating temperature of components 	<ul style="list-style-type: none"> high reliability and nearly maintenance free operation lasting high light output right through lifetime increased safety: more standard luminaire construction
High frequency operation	
<ul style="list-style-type: none"> high system efficacy (65-70 lm/W) no flickering no stroboscopic effect no noise 	<ul style="list-style-type: none"> economic, environment-friendly lighting in situations with long burning hours restful- non fatiguing light no danger with rotating machinery restful and non disturbing in operation
Electronic control	
<ul style="list-style-type: none"> output protected HF generator dimnable 	<ul style="list-style-type: none"> automatic switch off in case of failure of lamp. energy saving, environment-friendly lighting.
Instant (re-)start	
<ul style="list-style-type: none"> when needed light always instantly available 	<ul style="list-style-type: none"> more comfort extra energy saving feasible in combination with presence detectors suitable for security and safety lighting useful light immediately after switch on
3-line fluorescent coating	
	<ul style="list-style-type: none"> choice of color temperature white light good color rendering ($R_a > 80$)
Amalgam controlled Hg-vapor pressure	
	<ul style="list-style-type: none"> constant light output over a wide range of ambient temperatures

Table 1 Features and benefits of QL lamp system

1.2 Lamp system technology and operation

1.2.1 Operating principle

QL induction lighting is based on a principle, which is fundamentally different from that of conventional fluorescent lamps (e.g. TL or PL type lamps).

In conventional fluorescent lamps the electric current is supplied to the gas discharge through the glowing electrodes. In QL induction lamps the electrical energy is supplied to the gas discharge by means of a high frequency electromagnetic field without any electrodes. In conventional discharge lamps the electrodes mostly are the life-determining factor. Since these electrodes are not present in QL induction lamps, life of QL lamps can be very long.

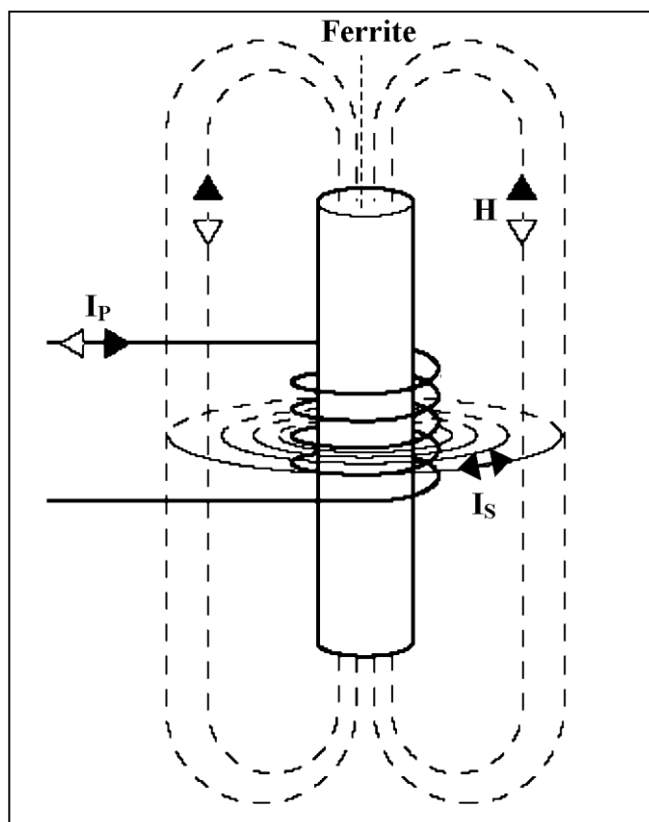


Figure 1 Induction principal

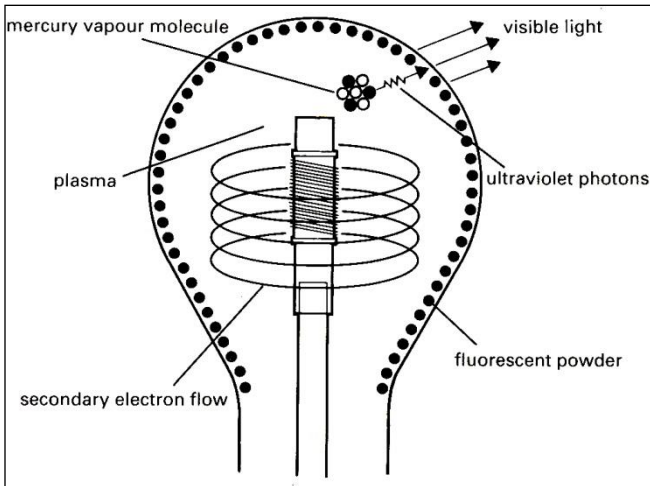


Figure 2 Discharge principle in the QL lamp bulb

In the QL induction lamp system, the energy source – equivalent to the primary coil in the transformer – is the lamp's induction coil, which is powered by high-frequency electronics. The secondary coil is represented by the low-pressure gas discharge (see Figure 2). The induced current causes a low-pressure mercury discharge, like in conventional fluorescent lamps. Similar to other fluorescent lamps, the ultra violet radiation generated in the discharge is converted to visible light by the fluorescent phosphor coating on the inside of the bulb wall.

1.2.2 Lamp system components

The QL lamp system consists of three components (see Figure 3), which will be described further in this chapter:

- A: The lamp (discharge vessel)
- B: The power coupler (construction base with antenna, mounting flange and electrical connection cable)
- C: The dimmable HF generator (electronics inclusive housing)

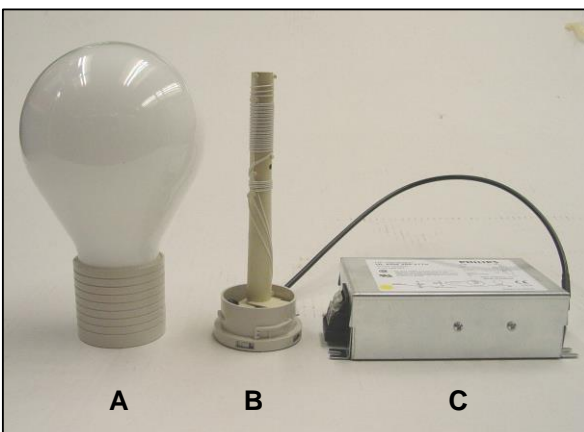


Figure 3 QL lamp system components

1.2.3 The lamp

The QL lamp or discharge vessel consists of a glass bulb (see Figure 4) containing an amalgam (mercury metal mixture) and an inert buffer gas.

The discharge in the lamp is maintained by means of an alternating magnetic (induction) field. This is generated by an antenna (see Figure 6) in the centre of the discharge, therefore without the use of electrodes. The wall of the lamp is coated on the inside with a fluorescent phosphor mixture, the well-known 3-line Super /80 phosphors used in TL-D, TL-5 and PL type lamps. These phosphor mixtures convert the generated UV radiation into visible radiation (=light). Due to the absence of electrodes, which are the lifetime-limiting components of conventional fluorescent lamps, the ultra-long life of induction lamps is ensured.

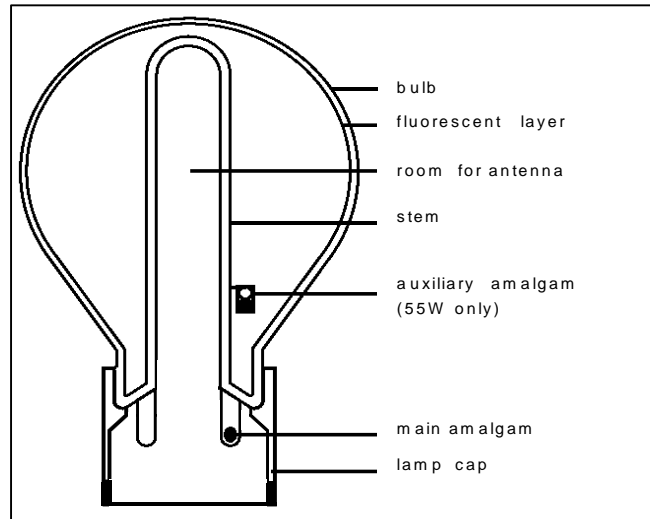


Figure 4 The QL 55W lamp

In the same way as in other compact fluorescent lamps the light output is maintained over a wide temperature range by means of an amalgam. This amalgam is located in a reservoir attached to the discharge vessel (see Figure 4). The lamp is fixed to the bottom part of the power coupler by means of the unique twist base system (see Figure 5).

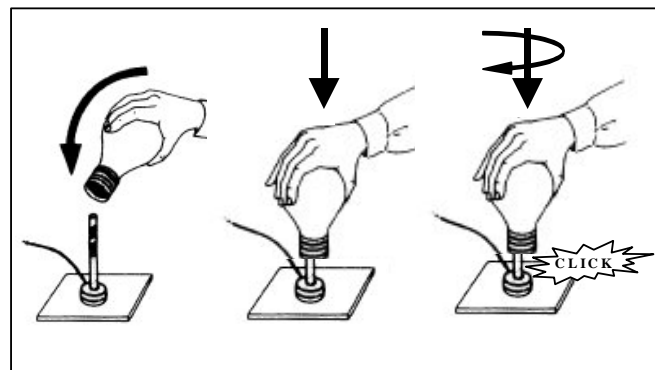


Figure 5 Assembly of lamp with power coupler

1.2.4 The power coupler

The power coupler (see Figure 6) is the part of the QL lamp system, which transfers the energy from the HF generator to the discharge in the vessel. It consists of an antenna, a heat conduction rod with mounting flange and a coaxial connecting cable, all assembled together on a plastic carrier.

The mounting flange should be mounted on a metal heat sink.

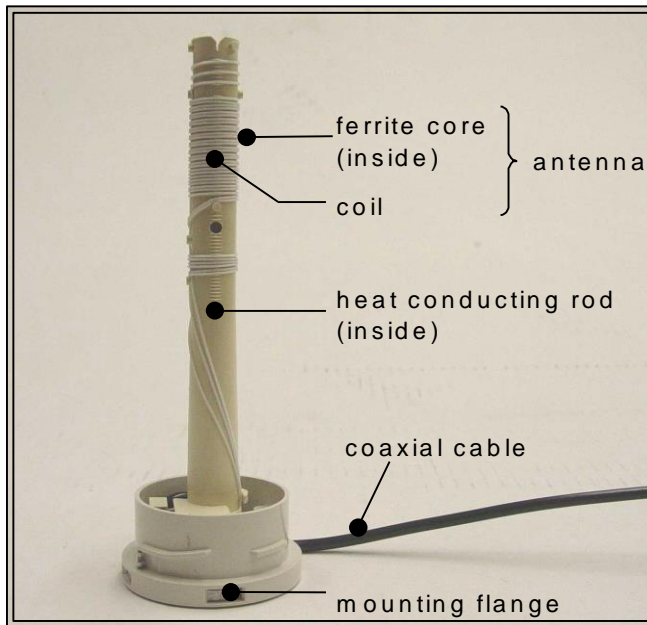


Figure 6 Power coupler

1.2.4.1 Antenna

This cylindrical element is the part of the power coupler located in the centre of the discharge vessel. It includes a coil and a ferrite core, which produce a high-frequency magnetic field (2.65 MHz).

The alternating magnetic field provides the energy for the gas discharge inside the lamp.

1.2.4.2 Heat conducting rod and mounting flange

By means of a conducting rod, which is located inside the antenna, the heat produced by the coil and the discharge is removed to the outside via the mounting flange. This metallic disk has a double function. Firstly, it ensures the mechanical connection between the lamp and the luminaire, and secondly it transfers the heat to a heat sink, which must be a part of the luminaire. The attachment to the luminaire heat sink is by means of 4 bolts. See section "2.5.5 Heat sink design" for proper heat sink design.

1.2.4.3 Cable

A coaxial cable forms the electrical connection between the antenna and the HF generator. The cable is permanently fixed at the antenna side. It can be (dis-)connected at the side of the HF generator by means of a push-wire connector in order to facilitate mounting of the lamp system in the luminaire.

The coaxial cable is made of flexible stranded core conductors insulated in heat-resistant plastic (150°C/300°F max.) and provided with a ferrite for EMI reasons. For optimal performance of the system (light and live) the length of the cable is fixed (see Table 10).

The user may not alter or change the length of the power coupler cable.

1.2.5 The dimmable HF generator

All QL HF generators are dimmable down to 50% of the rated wattage. The HF generator primarily contains an oscillator, which supplies the high-frequency power to the antenna to initiate and maintain a gas discharge in the discharge vessel. The HF generator ensures a well-stabilized oscillator power supply and filtering of the mains power. In addition, it provides a very good power factor and a low harmonic distortion of the mains. All the electronics are housed in a metal box with a dual function: screening against RFI (Radio Frequency Interference) and heat conduction to ensure proper long-life functioning of the electronics. If the metal housing, and power coupler are properly electrically connected to earth, the system will comply with all (inter-) national requirements regarding electromagnetic compatibility. The HF generator output frequency is approximately 2.65 MHz.

1.3 Nomenclature

QL induction lamp systems:

- Family name of all QL lamp systems irrespective of wattage, supply voltage or color temperature and operating with low-pressure induction discharge technology.

QL lamp system:

- Combination of a lamp, a power coupler and an HF generator; all with the same wattage indication.

E.g. QL 55W lamp system consists of:

- 1* Lamp QL 55W/8.. Twist base
- 1* Power Coupler QL 55W Twist base
- 1* HF-Generator QL 55W 200-277V

Only system components with the same wattage indication (55W or 85W or 165W) may be combined! Any other combination might cause damage to the lamp system components and possible interference effects to the environment.

QL lamp:

- Lamp QL...W/.... Twist base
Represents a lamp for a specific system wattage (55W or 85W or 165W) and a certain color temperature (/2700, /3000K etc, respectively).

E.g. Lamp QL 85W/3000:

Lamp for QL 85W lamp system and color temperature 3000K.

QL power coupler:

- Power Coupler QL..W Twist base
Represents a power coupler for a specific system wattage (55W or 85W or 165W).

E.g. Power Coupler QL 55W Twist base:
power coupler for 55W system

QL dimmable HF generator:

- HF Generator QL ...W 200-277V (HV) or HF-Generator QL ...W 100-120V (LV)
Represents a HF generator for a specific system wattage (55W or 85W or 165W) and supply voltage.
- For all QL lamp system supply voltages (HV and LV) the same lamp (55W or 85W or 165W) can be used.
For all QL lamp system supply voltages (HV and LV) the same power coupler (55 or 85W or 165W) can be used.
- Every HF generator may only be combined with one lamp/power coupler set of the same wattage; failure to observe this basic rule might cause damage to lamp system components and possible interference effects to the environment.

2. Luminaire design

2.1 Introduction

The design of QL luminaire systems related to light distribution needs the same skills as those for conventional light sources. Extra attention should be paid to heat and heat transfer and EMI. In the following paragraphs you can find more explanations.

2.2 Positioning of components

The QL lamp system is constructed in such a way that it gives designers maximum freedom for positioning the lamp components in the luminaire, taking into account the restrictions of the size and the high-frequency operation of the lamp system itself.

2.3 Earthing and fixation

Unless specially mentioned, it is assumed that the QL lamp system is mounted in a Class I luminaire (provided with an earth connection point), and that it is electrically well connected to a metal part of the luminaire. For the HF generator this is normally done by means of the mounting bolts with which the ballast and power coupler are mounted to the earthed mounting plate. Star washers should be used to ensure a proper earth contact right through the paint or lacquer covering the luminaire. Bolts to mount the ballast should be 4 mm diameter. The power coupler must be fixed to the heat sink by means of its mounting flange. This mechanical fixation must take place with **4 (!) bolts** made of plated iron or other non-corroding material (preferred is not to use stainless steel).

The holes in the mounting flange are pre-tapped for M4 bolts and are positioned in a circle with diameter of 40 ± 1 mm (1.575"), on two perpendicular axes (see Figure 7).

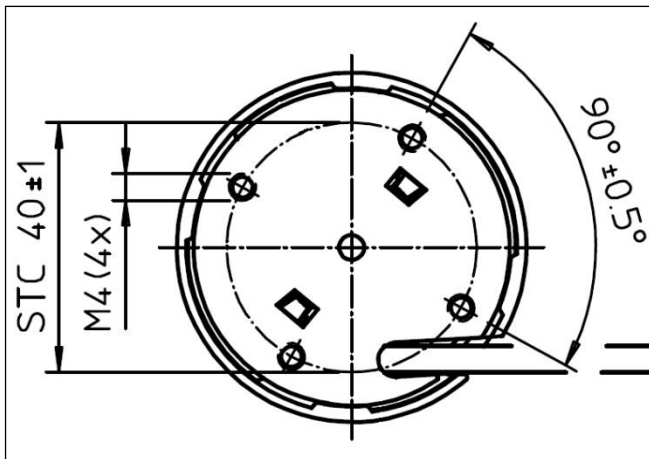


Figure 7 Drill pattern of power coupler mounting flange (55/85W)

Length of bolts <i>in</i> mounting flange		
	min (mm)*	max (mm)*
QL	10	16

Table 2 Wire-length of bolts in the mounting flange

Note*: this is without the thickness of the heat sink.
Be aware, a too small length of the bolt can cause lamps to fall down

Advised torque is 2-2.5 Nm (1.5 – 1.8 lbs•ft) (see Figure 8). The coaxial connection cable can be moved through an angle of 90 degrees with the mounting flange, allowing the cable to be led directly under the mounting flange through or along the luminaire heat sink to the generator compartment.

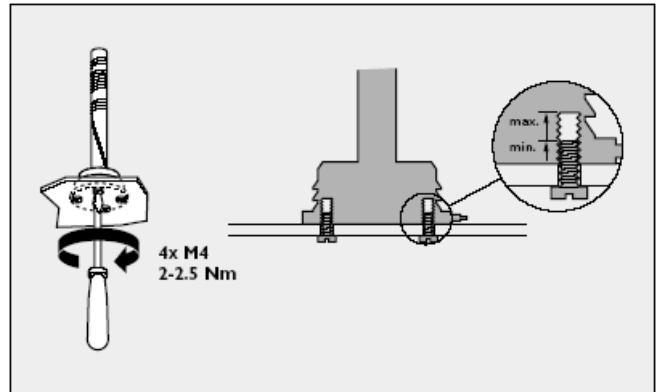


Figure 8 Fixation of power coupler to the heat sink with 4 bolts

2.4 General wiring

The wiring of the dimmable QL lamp system can be split up into two parts:

- power supply wiring
- HF output wiring
- control line wiring for dimming

It is important to observe the following guidelines if optimum system performance and minimum radio frequency interference are to be obtained:

- Keep mains wiring away from coaxial cable and lamps (minimum distance 10 cm).
- If complete separation is not possible, screen the mains wiring by a earthed metal plate.
- Keep mains wires as short as possible.
- Keep the coaxial cable as close as possible to all earthed metal parts (maximum distance 2 cm) and away from the lamp.
- Avoid loops in all wiring.
- Ensure firm electrical contact between all metal parts and the ballast housing and power coupler.
- The shield of the coaxial cable may not be earthed.

2.4.1 Power supply wiring (class I)

The power supply wiring is the electrical connection between the power supply and the HF generator input. This wiring must always use a 3-core cable for phase, neutral and earthing connections. The phase and neutral of the power supply must be connected to the connector block as described on the housing label (see Figure 9). In the case of DC power supply, the +pole must be connected to the phase connector, and the -pole to the neutral connector.

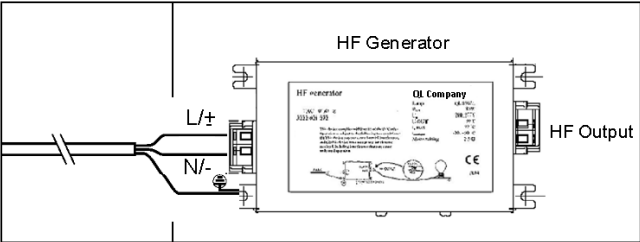


Figure 9 Wiring diagram class I luminaires

2.4.2 Power supply wiring (class II)

Under certain conditions it is possible to construct class II luminaires, in other words luminaires without earthing.

Warning:

All metal parts connected to the HF generator housing and mounting flange of the power coupler will be at 50% of the supplied voltage! The source resistance is high, so that under normal circumstances there is no danger by touching, but for safety reasons it is strongly advised to use a double-insulated construction.

The EMI performance will be worse than in class I

designs. In this case EMI testing is recommended to ensure that the QL luminaire complies with the (inter-) national EMC standards. Extra precautions may be required. The use of shielded 2-core cable, with shielding only connected to the HF generator housing, can be beneficial in limiting EMI (see Figure 10).

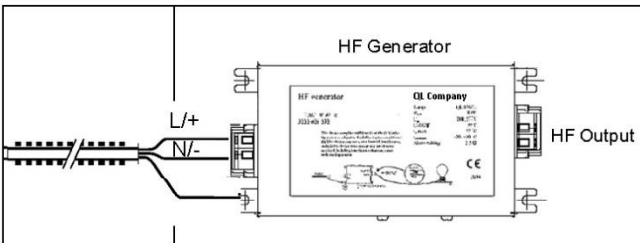


Figure 10 Wiring diagram class II luminaires

The phase and neutral of the power supply must be connected to the connector block as described on the housing label. If a DC power supply is used, the +pole must be connected to the phase and the -pole to the neutral connector.

2.4.3 HF output wiring (class I + II)

This wiring must be via the coaxial cable that is supplied as standard with the power coupler. Connections to the HF output of the HF generator must be made according to the color-coding of wires and the connector block (see Table 3 and Figure 11). Changing or extending of the coaxial cable is never allowed.

Generator	Power coupler
grey (-)	black
orange (+)	red

Table 3 Color-coding of generator and power coupler

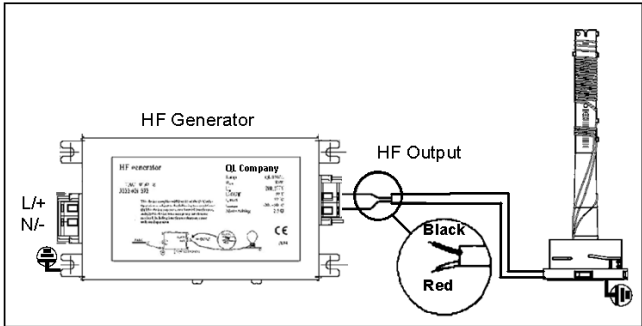


Figure 11 Connecting HF generator and power coupler

2.4.4 Control line wiring

The control line can be mounted next to the mains wires. The dim input can be used a standard 1-10V controller. This 1-10V input is SELV.

Connections to the control line must be made according to the color-coding of the connector block (see Table 4 and Figure 12).

Generator	Control line
blue (-)	low (-)
red (+)	high (+)

Table 4 Color-coding of control line

A connection diagram of all connectors is shown in Figure 12


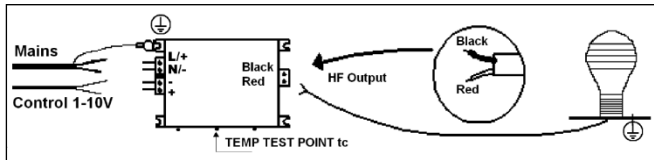


Figure 12 Connecting HF dimmable generator.

The mounting of the control line needs some special attention; The radiated magnetic field from the induction lamp system can induce RF voltages in a wiring loop, especially the loop that can be formed if a remote analogue dim voltage is connected via 2 wire cable separated from the mains voltage connection. The voltage induced in such can be so large that permitted emission limits are exceeded.

2.4.4.1 Remote dimming wiring prescriptions

Remote dimming means that the analogue dim signal is generated more than 80 cm from the QL generator. In this case if the analogue dim signal is supplied via separate wiring, the dim cable should run in parallel with the mains supply cable, and the distance of the centre of the cables should not be more than 12 mm apart. This can be realized by using e.g. tie wraps around mains cable and dim cable. If

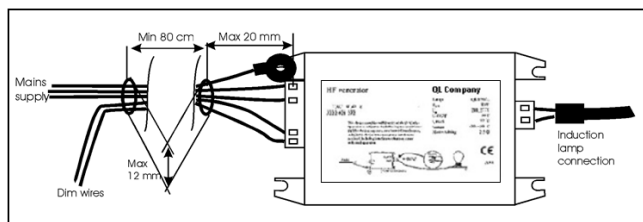


loose wiring is used, wires should be bundled in the first 80 cm from the generator, and the bundle diameter should be smaller than 12 mm. A tube or tubing around all wires or bundling with tie wraps is in this case recommended. After the first 80 cm, the dim wires can be separated from the mains wires. However, this length should not exceed 20 mm. See Figure 13.

Figure 13 Remote dimming wiring prescriptions

2.4.4.2 Local generated dim signal

A locally generated analogue dim signal can be derived from a Power Line Communications (PLC) or a stand-alone unit such as Philips Dynadimmer SELV, with isolated dim signal connection. In this case the dim wiring is connected to the QL generator very close to the generator, e.g. 10 cm distance. In general these devices will not cause increase of conducted emission on the power lines, however it is dependent on the internal construction of the local dimming device, whether the loop between dim wires and mains wires can cause too high EMC emissions.

For installation conditions in a typical luminaire, see Figure

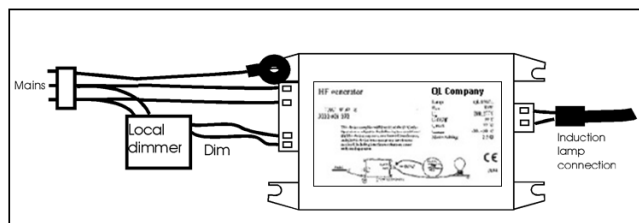

14.

Figure 14 Local dimmer wire prescriptions

2.4.5 Strain relief

The HF generator is not equipped with strain relief, neither on the power supply side nor on the HF output side.

It is advised to integrate strain relief in the luminaire construction to prevent (future) contact interruptions, which can cause possible damage to the QL lamp system.

2.5 Temperature measurements

2.5.1 General

In order to achieve optimum operation of the QL lamp system, certain temperature limits should be observed. Measurements must be made by means of thermocouples, which must be firmly fixed to the surface. For all measurements (temperature, light output and power), a stabilization period of at least two hours must be taken before any reliable data can be obtained. The level of stabilization can be checked, by monitoring the power consumption of the system. If a continuous measurement has to be made for a range of ambient temperatures, the rate of temperature change should be less than 2°C/hour.

For obtaining good light output the QL lamps are provided with an amalgam. This amalgam is located in a short exhaust tube close to the base of the power coupler. The temperature of the amalgam determines the mercury pressure in the vessel. There is a direct relationship between mercury pressure and light output and mercury pressure and power consumption. The amalgam stabilizes more or less the mercury pressure in an amalgam temperature range of 70°C/160°F (see Figure 15 between point 1 and 2). The system is designed in such a way that the most optimal result in light output is reached in case the power consumption is 55W/85W/165W (see point 3 and 4). Good results (less than 15% deviation in light output) are reached in case the power consumption is more than 50W for a QL 55W lamp system, more than 72W for a QL 85W lamp system and more than 145W for a QL 165W lamp system.

Dimming the QL system can cause a temperature decrease of the amalgam for this reason it is not recommended for 55W lamps to use the dim function in colder outdoor applications when temperatures are likely to go below 0°C.

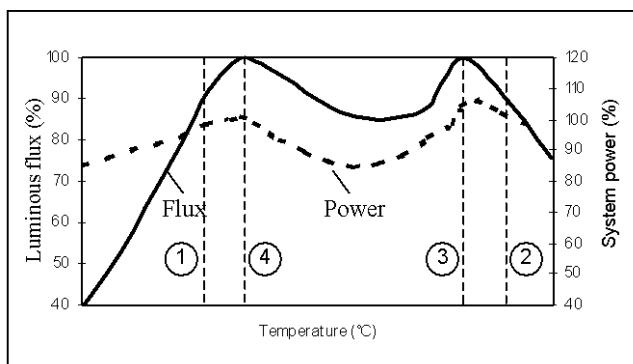


Figure 15 Typical curve for luminous flux / system power versus temperature for an amalgam lamp. Temperature range between 1 and 2, is 70°C/160°F

2.5.2 Permissible temperatures and lifetime of HF generator

The maximum temperature inside the luminaire is important for the lifetime of the HF generator. The relevant parameter is the case temperature t_c on the **test point** of the HF generator (see "TEMP TEST POINT t_c " on the label of the HF generator). For all HF generators the maximum allowable temperature is 82°C/179°F. The recommended temperature of the HF generator is 72°C/161°F. Safe end of life of the generator cannot be guaranteed above this temperature.

The lifetime of the QL lamp system is determined primarily by the lifetime of the generator, which is 80,000 hours with a failure rate of 20 % when operated at a t_c of 72°C/161°F (see Figure 16). If the temperature t_c is below this value of 72°C/161°F, the lifetime increases. Dimming will have no negative effect on the lifetime of the HF generator

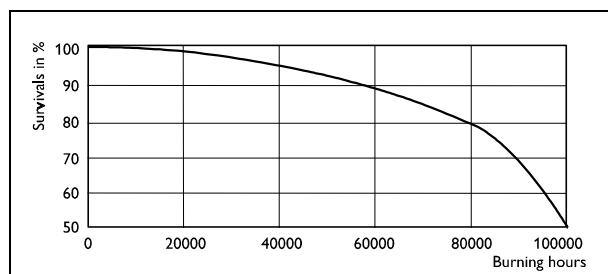


Figure 16 Typical life expectancy curve at a t_c of 72°C/161°F

Exceeding the maximum t_c temperature will result in an **undefined reduction** of the HF generator lifetime. A decrease of t_c will extend lifetime of the HF generator.

For ignition and operation of the QL lamp system, a temperature of $\geq -25^\circ\text{C}/-13^\circ\text{F}$ for the system is required.

Tips for HF generator temperature reduction:

1. Do not mount the HF generator too close to the mounting flange of the power coupler.
2. Ensure good heat transport to the surroundings (heat sinking).
3. Use separate heat sinks for both the power coupler and HF generator.
4. Avoid heat radiation from lamp to HF generator.

5. Mount the bottom of the HF generator housing on its own heat sink; but never apply a heat sink for the test point only.
6. Create a cooling airflow along the housing, e.g. with a chimney effect.

2.5.3 Permissible temperatures of power coupler

There is a relationship between the amalgam temperature and the temperature of the base of the power coupler (called $T_{\text{mounting flange}}$).

The advised maximum $T_{\text{mounting flange}}$ temperature is 100°C/212°F. Exceeding the maximum $T_{\text{mounting flange}}$ temperature will result in an undefined reduction of the lamp system lifetime and lumen output.

However, for normal operation the $T_{\text{mounting flange}}$ temperature should be lower. This is because the amalgam temperature (see chapter 2.5.4 Permissible temperatures of amalgam) will run a certain amount above the power coupler temperature depending on the luminaire design, the orientation, and the system wattage.

The correct way of measuring $T_{\text{mounting flange}}$ is at the test point on the power coupler (see Figure 17). The measurements can be made with a thermocouple.

Special attention should be paid on the diameter of the thermocouple wires. It is advised to use very thin thermocouples, in order to keep the power coupler mating to the cooling plate when the thermocouple is mounted between those surfaces.

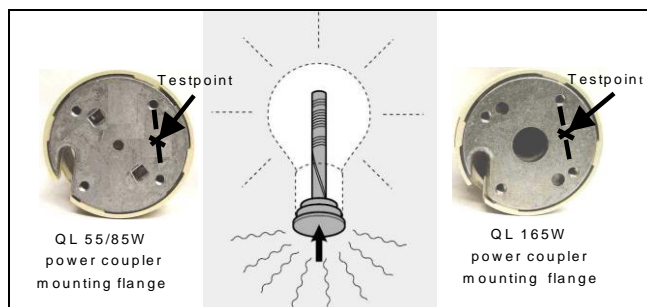


Figure 17 The location of the mounting flange temperature test point

Recommendation for power coupler temperature reduction:

1. Mount the power coupler on its heat sink with 4 bolts with proper length (see paragraph "2.3 Earthing and fixation").
2. Heat sink materials must have good thermal conductivity e.g. aluminum (see Table 5).
3. Use a material thickness of at least 3 mm for the heat sink.
4. Use a heat sink with the largest possible surface area.
5. Painting of the heat sink and metal housing of the luminaire can reduce the temperature of the power coupler and the generator.

2.5.4 Permissible temperatures of amalgam

In relatively compactly designed luminaires, used in high ambient temperatures, the amalgam could melt and drop in the lamp. The amalgam temperature should therefore not exceed 105°C/221°F when operated base-up or horizontal. When the lamp is operated base-down, this temperature can be exceeded, however the system wattage will decrease, which will correspond to a reduction in luminous flux.

2.5.5 Heat sink design

To ensure that the mounting flange of the power coupler and/or HF generator test point temperatures do not exceed the specified maximum permissible values, additional heat sinks can be used. The applicable heat transport mechanisms are conduction in the heat sink to divide the heat over a bigger surface area, and convection and thermal radiation to transfer the heat to the surroundings. This chapter will not indicate exactly how to calculate a heat sink, but gives some guidelines on how to improve its performance.

The type of material used for the heat sink has a relatively great influence on the final result. When we compare, for instance, the thermal conductivity (κ) between copper and corrosion-resistant steel (see Table 5) a substantially smaller heat sink can be made with copper. The most practical choice to be used for heat sinks is aluminum.

Material	κ (W/mK)
Copper	350-400
Aluminum	200-250
Brass	100-125
Steel	30-50
Stainless steel	15

Table 5 Thermal conductivity (κ)

The thickness (d) of the heat sink is also of major importance. Assuming that we have different heat sinks with the same size, but made from different materials, the same effect in temperature difference will be reached if the products of thermal conductivity (κ) and material thickness (d) are constant. This means more or less the same result with a heat sink of 1 mm copper, 2 mm aluminum, 4 mm brass, 8 mm steel or 26 mm corrosion-resistant steel. Increasing the surface area of the heat sink will also lead to improvement, but the effect will be smaller at larger dimensions and is dependent on the thermal conductivity (κ) of the material and the thickness (d) used (see Figure 18).

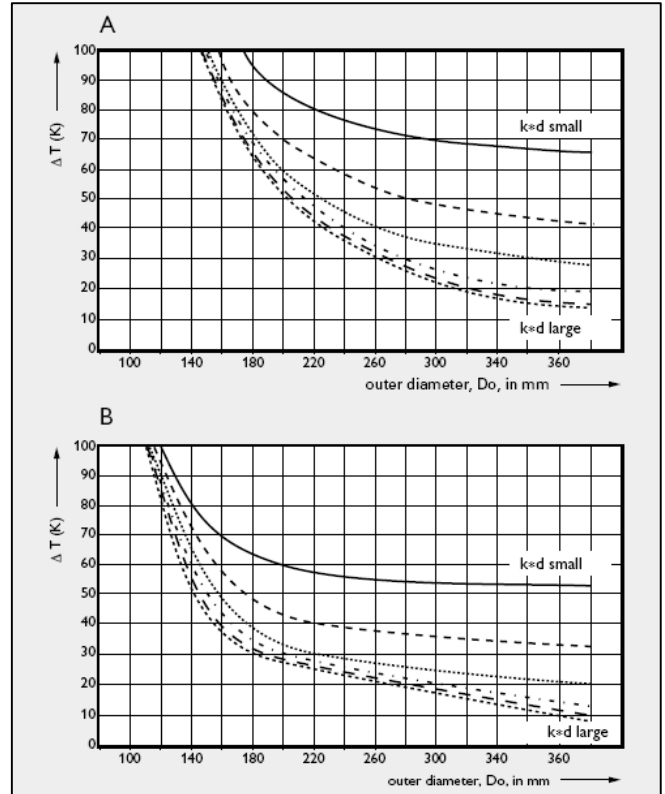


Figure 18 The influence of an increasing heat sink diameter for different $\kappa \cdot d$ for: A/ polished unpainted surface and B/ unpainted surface

Thermal radiation can also form a substantial part of the total heat transfer, and is of the same order as for convection. This depends strongly on the emission coefficient of the surface, which lies between 0 and 1. For example, a polished aluminum surface has a very low emission coefficient, while that of a painted surface is very high (see Table 6).

Material	Finish	Emission coefficient
Aluminum	New/polished	0.04 ~ 0.06
	Oxidized	0.2 ~ 0.3
	Anodized	0.8
Paint		0.8 ~ 0.95
Copper	New/polished	0.03 ~ 0.07
	Heavy oxidized	0.7 ~ 0.8

Table 6 Emission coefficients

Example:

In Table 7 practical information is given on actual surface area for two different thicknesses of aluminum, for the same luminaire in "open" and "closed" conditions. For both luminaire constructions, the recommended maximum ambient temperatures are given.

Luminaire construction	Heat sink (aluminum)		T _{ambient max} (°C)
	thickness	surface area	
	(mm)	(cm ²)	
Open	2	250	55
Open	1.5	500	55
Closed	2	250	35

Table 7 Typical heat sink design for power coupler of QL 85W lamp system

2.6 EMC measurements

2.6.1 EMC measurements with QL generator

The EMC measurements with luminaire must be done with the 80 cm parallel running mains wiring and dim wiring. Then at the end both the Mains termination 50 Ohm//50 µH AMN (<30 MHz)/ CDN3 (150 Ohm, > 30 MHz) and the AF2 termination for the dim cables (150 Ohm load for both dim wires in parallel) should be connected close to each other. One of the devices is connected to the 50 Ohm measurement receiver and the other non-used termination is closed with 50 Ohm.

Note: The dim cable has no earth lead. In order to prevent a large earth loop that picks up the field of the induction lamp causing erroneous disturbance voltage measurement, the AF2 should be connected with a short earth lead on the front side near the dim signal connection to the front earth connection of the LISN.

Alternatively, earth connections of the AF2 and of the LISN are bounded at the front side to the local earth plane, immediately below LISN and AF2.

See Figure 19 for wiring details.

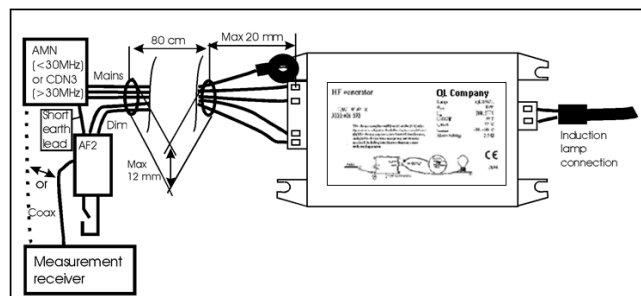


Figure 19 EMC measurement set-up

2.7 Lamp

Under normal conditions there are no lifetime-determining parts in the lamp, which means that it can be fully integrated in the optical housing system. Only the effectiveness of the fluorescent coating will decrease over time, but at a much lower rate than with conventional light sources. The light output after 80,000 hrs will still be more than 70% of the initial value. (See Figure 24).

The lamp can be positioned in all possible burning positions. The maximum light output is controlled by the mercury vapor pressure in the lamp, which is determined by the temperature of the amalgam. The amalgam tip is in close proximity of the mounting flange. Therefore the luminaire should be designed in such a way that under operating conditions the temperature of the mounting flange of the power coupler reaches the maximum advised temperature. The measurable difference depends mainly on the luminaire heat insulation properties, reflector design and construction of the luminary heat sink. This may result in a light output difference of maximum 15% over about 70°C/160°F ambient temperature variation (see Figure 15).

2.7.1 Exposure limits

The UV, blue light and IR emission of the QL lamp system can be, according to IEC 62471, classified in the exempt risk group. This means that QL lamp systems can be used in open luminaires, so without any precautions like filters and front glasses

PET stands for Permissible Exposure Time for human beings in relationship to the amount of radiated UV in hours x 1000 lux.

The amount of UV radiated by QL systems is about equal to the amount of UV radiated by conventional low-pressure mercury lamps per 1000 lm, i.e. PET > 24h x klx.

2.7.2 Damage factor

Another effect of UV (and blue light) is the risk of fading of illuminated goods. The fading impact of a light source can be expressed by the so-called damage factor (Dfc). The total effect depends on this factor, the total exposure time and the illumination level.

The damage factor (Dfc) for QL systems (can be found in Table 21), is directly comparable to that of normal tubular fluorescent lamps of comparable light output, and is thus insignificant due to the very low UV radiation.

2.7.3 Application

QL lamp systems may be used in open indoor luminaires without special precautions.

2.7.4 Lamp holder / lamp base

QL lamp systems do not require (special) lamp holders. The power coupler acts as lamp holder. Due to their ultra-long life and the required additional heat sink for at least the power coupler, all system components are permanently fixed into the luminaires.

Remark:

- Under normal operating conditions no additional support of the lamp is needed.
- Be aware that metal parts do not touch the glass surface

3. Guidelines for the installation of QL luminaries

3.1 Earth leakage circuit breakers

The earth leakage current of the HF generator is normally less than 0.5 mA_{rms}. At the moment of switching-on the installation, the earth leakage may, however, be temporarily higher. For this reason it is advised not to connect more than 30 QL lamp systems to one 30 mA earth leakage circuit breaker.

3.2 Inrush current

Like all electronic equipment, QL lamp systems have a peak current shortly after the mains is switched on, the so-called inrush current (see)

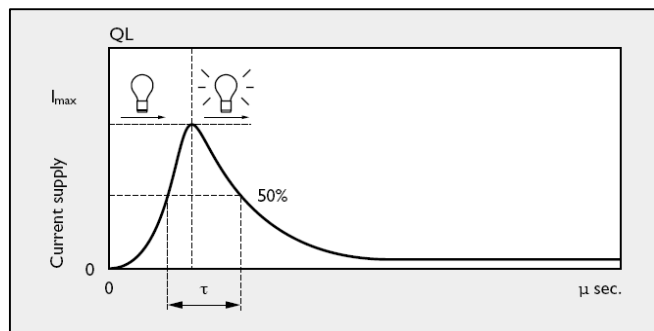


Figure 20 Maximum duration and value of the inrush current of a QL lamp system

Typical values are shown in Table 8.

	Inrush current ½ value time at typical mains impedance			
	V nom. (V)	I nom. (mA)	I max. (A)	τ (μs)
QL 55W	230	260	12	170
QL 55W	120	460	16	170
QL 85W	230	400	12	170
QL 85W	120	730	16	170
QL 165W	230	740	24	140
QL 165W	120	1420	28	150

Table 8 Typical inrush currents for QL lamp systems

When a number of QL lamp systems are operated on Mains Circuit Breakers (MCBs) and are therefore switched on simultaneously, the inrush currents have to be taken into account when calculating the maximum permitted load on the MCBs. Both B-type and C-type 10A and 16A MCBs have been considered. The results of these measurements are reproduced in the tables, stating the recommended maximum number of QL lamp systems to be operated on one MCB.

Notes:

1. It is advised to use C-type MCBs in lighting installations equipped with electronic ballasts
2. Always make sure that the mains current of the load does not exceed the nominal permitted value of the MCB concerned. In fact, it is recommended that the installation be designed for a maximum load of 80% of the nominal permitted MCB load.

Maximum number of QL lamp systems to be used on one MCB on account of inrush currents, for 230-277V (HV) and 100-120V (LV) mains voltage.

MCB type	QL 55W		QL 85W		QL 165W	
	HV	LV	HV	LV	HV	LV
B type 10A	25	15	20	10	10	5
C type 10A	25	15	20	10	10	5
B type 16A	45	25	30	15	14	7
C type 16A	45	25	30	15	14	7

Table 9 Maximum number of QL lamps systems to be used on one MCB

Note: If it is absolutely necessary to connect more than the specified number of QL lamp systems to one MCB, install a relay in the circuitry as shown in Figure 21. This will ensure that the peak current in the connected QL lamp systems does not occur simultaneously.

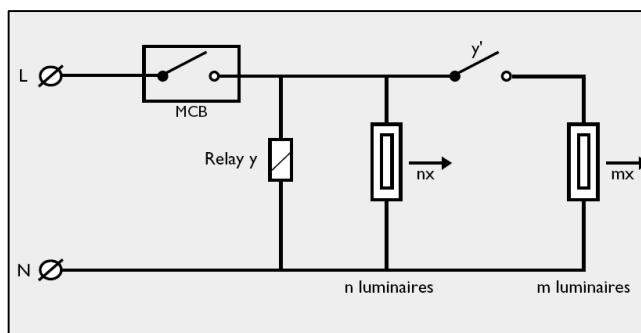


Figure 21 Inclusion of a relay in the circuit

3.3 Testing the installation

Testing a QL lamp system installation for wire insulation and electrical strength of the ballast should be carried out with the luminaires disconnected in order to exclude luminaire influences (see Figure 22 and Figure 23). The earth leakage current of the ballast will, for example, lead to unreliable measurements. If, however, in special circumstances the luminaires must remain connected, the following warnings should be observed:

1. Testing the insulation of the wiring:
Connect 500V DC between earth and respectively the phase and the neutral supply cable.
2. Testing the electrical strength of the HF generator:
Connect all QL lamp systems inputs together and connect ($1000V + 2U_{out}$) AC for 1 minute between this point and earth (HF generator housing).
3. Testing between mains and neutral is not permitted, as this might cause damage to the HF generator.
4. After the test has been completed, make sure that the neutral is reconnected, since a disconnected neutral will result in unpredictable mains voltage (50V..400V), which may damage the HF generator.

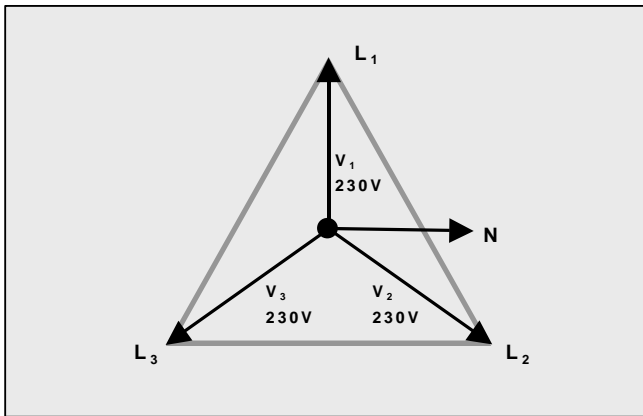


Figure 22 Normal situation in neutral connected

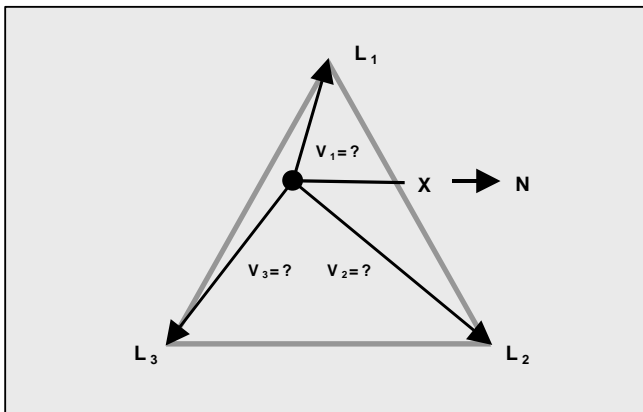


Figure 23 Situation when neutral is not connected ("loose neutral") and the load on all phases is not symmetrical.

3.4 Ambient luminaire temperatures and optimum QL lamp system lifetime

The heat produced in the luminaire by the HF generator and lamp must be conducted to the surroundings. When a luminaire is physically isolated by the ceiling or by isolating blankets (insulation), the produced heat cannot easily flow to the surroundings. This will result in the HF generator inside the luminaire being heated up, which in turn will have an adverse effect on its life. For an optimum lifetime of the HF generator it is important to remember that:

- **Air should be able to flow freely around the luminaire**
- **Air flow through the luminaire reduces the temperature inside**

3.5 On/off switching

The QL lamp system is designed for general lighting purposes (100,000 cycles), however it can also be applied in applications (flashing, warning light etc.), where frequent on/off switching is needed. This will not influence the lifetime behavior.

4. Lamp operation

4.1 Starting characteristics

4.1.1 Ignition and lifetime performance

QL lamp systems offer direct, flicker-free ignition after switch-on, in both cold and hot conditions.

Ignition time:	< 0.5 s
Hot-restrike time:	< 0.5 s

Minimum HF generator test-point temperature for ignition: -25°C/-13°F.

4.1.2 Luminous flux during starting period

The run-up behavior of QL lamp systems is influenced by:

- Luminaire construction.
- Ambient temperature at the moment of ignition.
- The duration of the period that the system was cool-downed after the last switch-off.

The QL lamp systems are based on the low-pressure mercury discharge technology and therefore in principle sensitive to (changes in) ambient temperatures. This means that after switch-on the light output of the lamp will vary until a stable situation is reached, which depends on the actual operating conditions. This will not happen in seconds but in minutes.

If a lamp has reached the stable level and is switched on again after a short off period, light output will immediately return to around the normal stable level (incandescent lamp-like).

In the dimming mode the QL system will always start at 100% power in order to heat up the system. After this run up time (around 15 minutes) the driver will automatically change to the dimming level depending on the control line value.

4.1.3 Lumen maintenance

The luminous flux of a QL lamp system is expected to have depreciated after 80,000 hrs to no less than 75% of the initial flux (see Figure 24 for a lumen maintenance curve).

Dimming will have no negative effect on the lumen maintenance of the QL lamp system

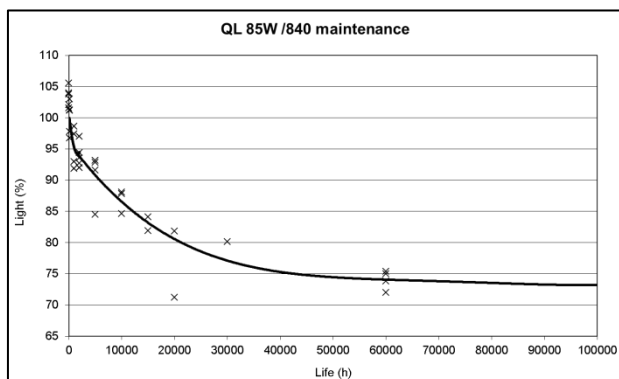


Figure 24 Typical lumen maintenance curve.

4.2 Burning position

Although the burning position is universal, the relationship between light output and temperature will be different for different burning positions. In the base-up position of the QL lamp system, the amalgam temperature will be slightly higher than in the base-down position with the same environmental conditions. This phenomenon can be used in luminaire design for specific ambient temperatures. As an example, the shift of the luminous flux curve for a typical design is given in Figure 25.

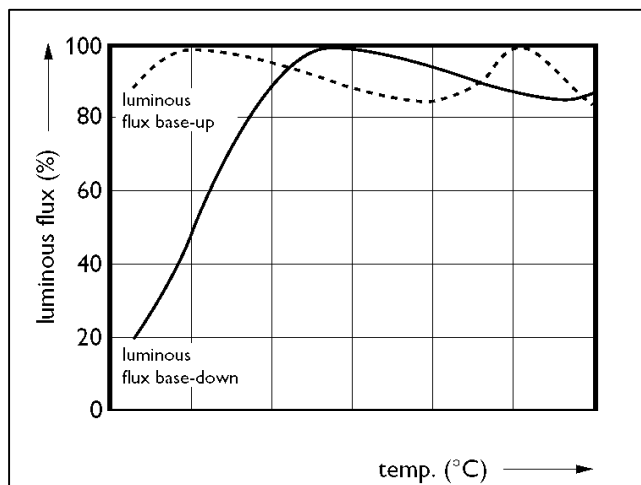


Figure 25 Typical influence of burning position on luminous flux

4.3 Optical design

QL lamp systems offer a homogeneous light distribution, and can be used in a variety of luminaire designs. The choice of material, shape and dimensions can help ensure optimum functioning of the lamp (mechanically, thermally and photometrically). If a lot of light is reflected back to the lamp, this will increase the lamp operating temperature and may result in lower light output. The reason for this is that the main amalgam temperature will increase, which in turn regulates the light output. For the same reason, it is advised to keep the lamp cap behind the reflector (if used), because the main amalgam is located in the lamp cap (see Figure 26).

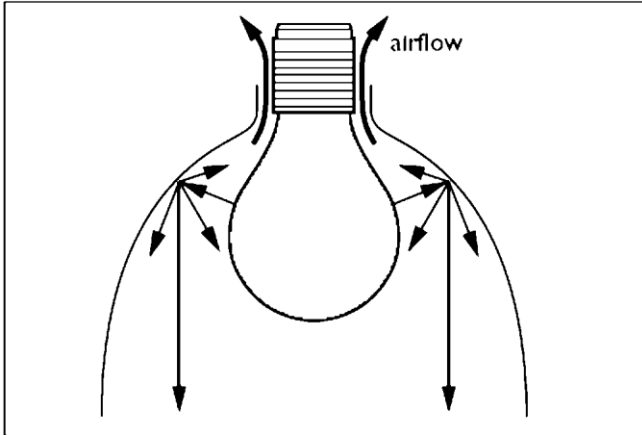


Figure 26 Influence of reflector position around lamp with chimney effect

A space between the reflector and the lamp ("chimney" effect) can increase the main amalgam temperature. In some cases the main amalgam temperature can become too high, so that the lamp system's operating point falls outside the preferred range.

4.3.1 Relationship of luminous flux, system wattage, amalgam and ambient temperature

The QL lamp is provided with an amalgam. Therefore the light output and system wattage have a direct relationship to the amalgam temperature during operation. This means in practice that the actual luminous flux and system wattage depend on the luminaire construction, its heat insulation properties and the ambient temperature, which determine the actual amalgam temperature. For a typical QL lamp system the relationship between luminous flux and system wattage vs. temperature is shown in Figure 27. See also the remarks about the amalgam temperature made in Chapter 2.5.4 Permissible temperatures of amalgam.

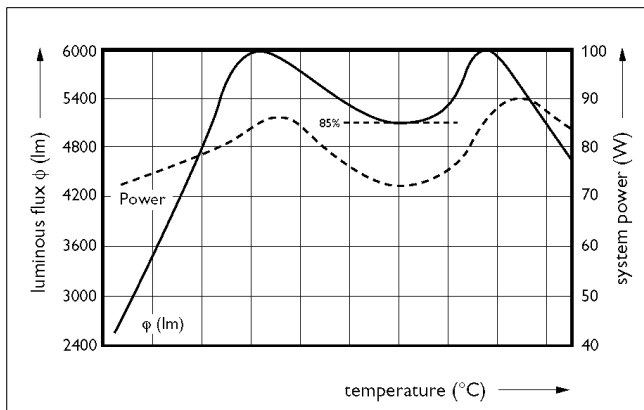


Figure 27 Typical QL 85W lamp system curves for luminous flux / system power versus temperature

If a luminaire is designed for a QL dimmable system special attention should be paid to the luminaire construction, its heat insulation and heat conducting properties, since the amalgam temperature will change depending on the dimming level. The suitable ambient temperature range of a

dimnable QL luminaire is both determined by the temperature at an operating level of 100% as by the temperature at an operating level of 50% and might be smaller compared to a non-dimmable luminaire.

4.4 Luminous flux versus ambient temperature

The temperature of the main amalgam normally controls the luminous flux of QL lamp systems. Therefore it will be more or less constant (deviation max. 15%) over a wide temperature range. In outdoor luminaires, which may be used at temperatures below 0°C/32°F, the luminous flux can be too low. This can be improved by increasing the temperature of the main amalgam. This can be done in different ways:

- Position lamp base-up instead of base-down or horizontal if possible.
- Improve insulation of the total luminaire; care should be taken in this case that the maximum permissible temperature of the HF generator and power coupler-mounting flange is not exceeded in the practical application.
- Encapsulate the lamp base (partly) in a heat-radiating envelope; this envelope can be a part of the power coupler heat sink or of the reflector.

Dimming the QL system can cause a temperature decrease of the amalgam for this reason it is not recommended for 55W lamps to use the dim function in colder outdoor applications.

4.5 Dimming

QL dimmable generators can be used with normal QL power couplers and QL lamps . A QL dimmable system can be dimmed down to 50% of its nominal power, as can be seen in figure 41.

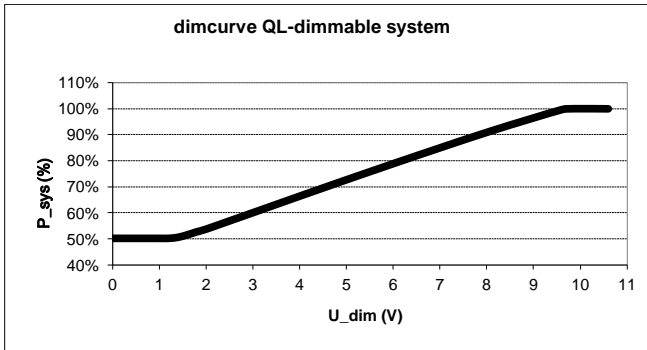


Figure 28 Luminous flux as function of the dim input voltage

In practice small deviations from figure 41 can occur, depending on the generator temperature.

Dimming is only possible after the run up time (15 minutes), as described in chapter 4.1.2 Luminous flux during starting period. The maximum system power of a dimmable driver is limited to its rated wattage, to ensure optimal energy saving costs.

In maximum dimmed state (50% power), there will almost be a light output of 50%. A small color shift will occur when lamps are dimmed. Please be aware of the fact that in cold applications the luminous flux can change in a dimmed state

5. QL lamp system specifications

5.1 Mechanical characteristics

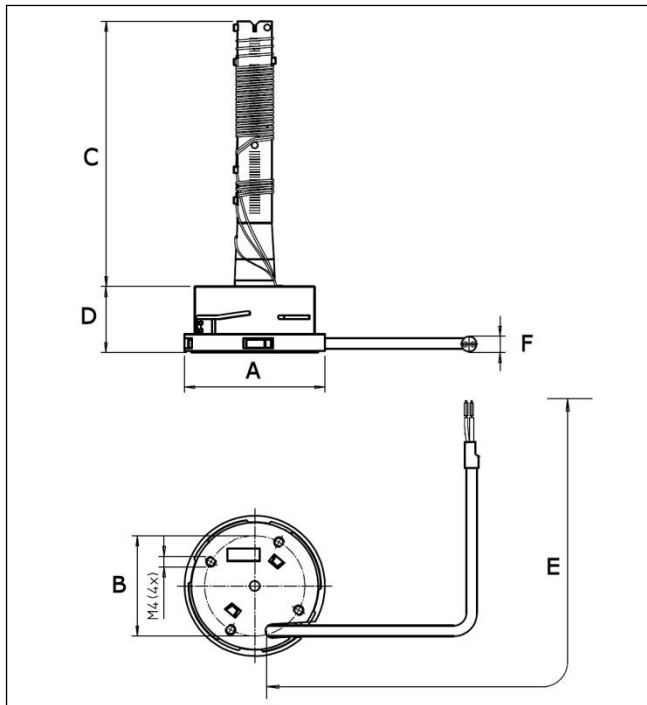


Figure 29 Power coupler dimensions

Power coupler type	QL 55W	QL 85W	QL 165W
A nom (mm / inch)	56 / 2.20	56 / 2.20	56 / 2.20
B nom (mm / inch)	40 / 1.58	40 / 1.58	40 / 1.58
C nom (mm / inch)	133.5 / 5.26	164.5 / 6.48	185 / 7.28
D nom (mm / inch)	27 / 1.06	27 / 1.06	27 / 1.06
E nom (mm / inch)	555 / 21.85	555 / 21.85	555 / 21.85
F max (mm / inch)	9.5 / 3.74	9.5 / 3.74	9.5 / 3.74

Table 10 Power coupler dimensions

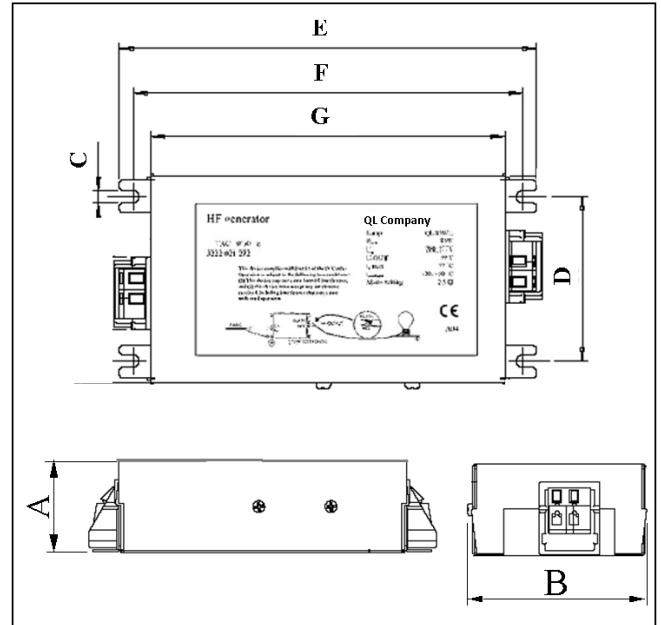


Figure 30 HF generator dimensions

HF generator type	QL 55W	QL 85W	QL 165W
A nom (mm / inch)	40.8 / 1.61	40.8 / 1.61	42.3 / 1.67
B nom (mm / inch)	78.0 / 3.07	78.0 / 3.07	118 / 4.65
C nom (mm / inch)	4.5 / 0.18	4.5 / 0.18	4.5 / 0.18
D nom (mm / inch)	60 / 2.36	60 / 2.36	70 / 2.76
E nom (mm / inch)	150 / 5.91	150 / 5.91	190 / 7.48
F nom (mm / inch)	140 / 5.51	140 / 5.51	178 / 7.01
G nom (mm / inch)	127.3 / 5.01	127.3 / 5.01	148.7 / 5.85

Table 11 HF generator dimensions for both fixed and dimming generators.

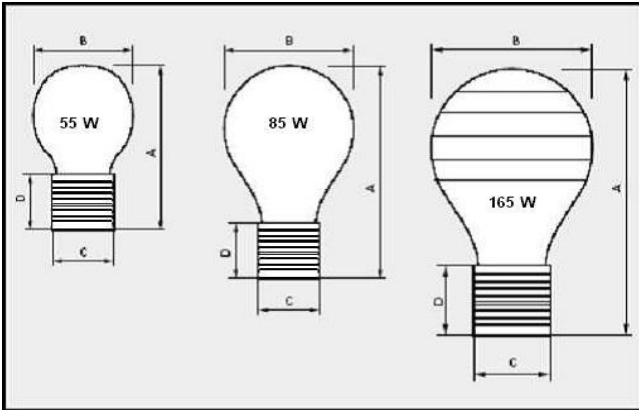


Figure 31 Lamp dimensions

Lamp type	QL 55W	QL 85W	QL 165W
A max (mm / inch)	141 / 5.55	180.5 / 7.11	205.5 / 8.09
B max (mm / inch)	86 / 3.39	111 / 4.37	131 / 5.16
C max (mm / inch)	57 / 2.24	57 / 2.24	57 / 2.24
D max (mm / inch)	49 / 1.93	49 / 1.93	49 / 1.93

Table 12 Lamp dimensions

Weights (g)	QL 55W	QL 85W	QL 165W	QL 165W dim
Lamp	120	135	205	205
Power coupler	185	220	290	290
Generator	590	620	705	650
Total QL lamp system	895	975	1200	1145

Table 13 Weights.

5.2 Electrical characteristics

There is a relationship between the system power and the amalgam temperature (see chapter 4.3.1 Relationship of luminous flux, system wattage, amalgam and ambient temperature). In Table 14 the values of the system power are given if the amalgam temperature is between 50°C and 105°C (for 165W between 70°C and 105°C). This is in stable situation. In practice this means about two hours after ignition. During the run-up the values can deviate.

		QL 55W	QL 85W	QL 165W
System power nom.	W	55	85	165
System power min.	W	51	71	160
System power max.	W	57	89	190

Table 14 System power in stable burning situation

More electrical characteristics:

		QL 55W 100-120V	QL 55W 200-277V	QL 85W 100-120V	QL 85W 200-277V	QL 165W 100-120V	QL 165W 200-277V
AC supply voltage nom.	V	120	230	120	230	120	230
AC supply voltage min.	V	90	180	90	180	90	180
AC supply voltage max.	V	140	305	140	305	140	305
DC supply voltage nom.	V	120	230	120	230	120	230
DC supply voltage min.	V	90	180	90	180	90	180
DC supply voltage max.	V	180	350	180	350	180	350
Supply frequency nom.	Hz	60	50	60	50	60	50
Supply frequency min.	Hz	47	47	47	47	47	47
Supply frequency max.	Hz	63	63	63	63	63	63
Supply current nom.	mA	460	260	730	400	1420	740
Inrush current max.	A	16	12	16	12	28	24
Duration inrush current max.	µs	170	170	170	170	150	140
Power factor nom.		>0.98	>0.98	>0.98	>0.98	>0.98	>0.98
HF output frequency nom.	MHz	2.65	2.65	2.65	2.65	2.65	2.65
HF output frequency min.	MHz	2.30	2.30	2.30	2.30	2.30	2.30
HF output frequency max.	MHz	3.00	3.00	3.00	3.00	3.00	3.00
HF output voltage max.	kV	1.5	1.5	1.5	1.5	1.5	1.5
Leakage current	mA	<0.5	<0.5	<0.5	<0.5	<0.5	<0.5
Ignition time	s	<0.5	<0.5	<0.5	<0.5	<0.5	<0.5
Overvoltage*)		200VAC	400VAC	200VAC	400VAC	200VAC	400VAC

*) Max. 2 hours

Table 15 Electrical characteristics of QL lamp systems.

5.3 Light performance characteristics

5.3.1 Luminous flux

Values at 100 h.	QL 55W				QL 85W				QL 165W			
Color characteristic (K) CRI: > 80	2700	3000	4000	5000	2700	3000	4000	5000	2700	3000	4000	5000
Luminous flux nom. (lm)	3550	3650	3650	3500	6100	6200	6200	6100	11000	12000	12000	11000

Table 16 Luminous flux

Above-mentioned data is retrieved on September 2010. For all latest updates, please see our QL Company website.

5.3.2 Efficacy

Unlike other lighting systems, the rated wattage of QL is the system wattage instead of the lamp wattage. Therefore one can speak of the system efficacy and the lamp efficacy (lamp efficacy is average, actual value can deviate depending on e.g. the losses in the ferrite core)

Values at 100 h.	QL 55W				QL 85W				QL 165W			
Color characteristic CRI: > 80	2700	3000	4000	5000	2700	3000	4000	5000	2700	3000	4000	5000
System efficacy (lm/W _{sys})	65	66	66	64	72	73	73	72	67	73	73	67
Lamp efficacy* (lm/W _{lamp})	72	74	74	71	80	81	81	80	74	81	81	74

Table 17 Luminous flux

Above-mentioned data is retrieved on September 2010. For all latest updates, please see our QL Company website.

5.3.3 Luminous intensity diagrams

gamma (degree)	Average lumen intensity (cd/1000lm)
0	66.1
5	67.6
10	69.1
15	71.2
20	73.3
25	75.6
30	78.1
35	80.6
40	82.9
45	84.7
50	86.0
55	87.0
60	88.1
65	89.3
70	90.1
75	90.7
80	91.1
85	91.1
90	91.0
95	90.4
100	89.0
105	87.2
110	85.0
115	82.3
120	79.1
125	75.6
130	71.6
135	67.2
140	62.3
145	57.1
150	51.8
155	46.6
160	41.0
165	32.6
170	23.1
175	0.5
180	0.5

Table 18 Luminous intensity QL55W

See Figure 32 Light distribution QL 55W and Figure 33 Azimuth angle QL55W.

QL 55W

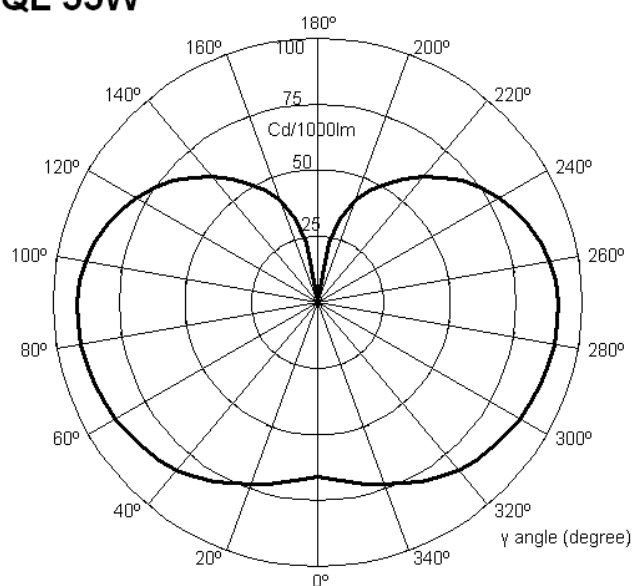


Figure 32 Light distribution QL 55W

QL 55W

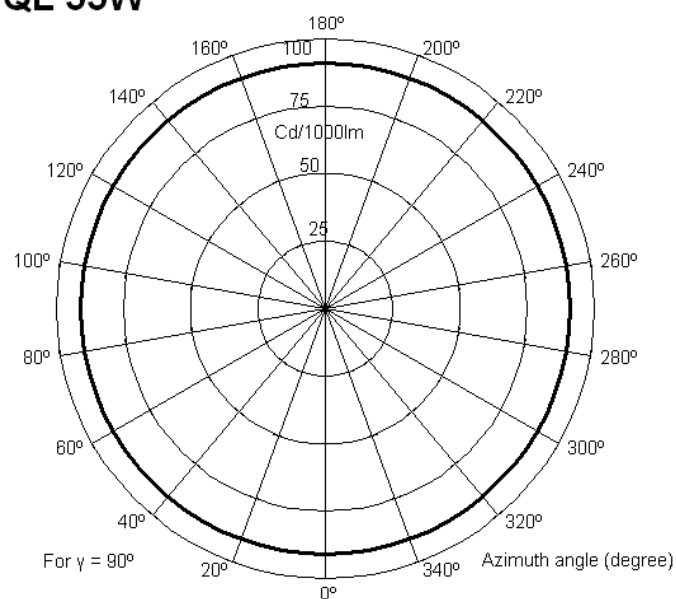


Figure 33 Azimuth angle QL55W

gamma (degree)	Average lumen intensity (cd/1000lm)
0	75.8
5	75.8
10	76.0
15	76.2
20	76.4
25	76.9
30	77.7
35	78.9
40	80.4
45	82.2
50	84.3
55	86.1
60	87.8
65	89.2
70	90.3
75	91.1
80	91.6
85	91.5
90	91.0
95	90.0
100	88.4
105	86.5
110	84.0
115	81.1
120	77.9
125	74.3
130	70.5
135	66.4
140	62.2
145	57.9
150	53.7
155	49.5
160	45.4
165	40.9
170	28.6
175	0.3
180	0.3

Table 19 Luminous intensity QL 85W

See Figure 34 Light distribution QL 85W and Figure 35
Azimuth angle QL 85W

QL 85W

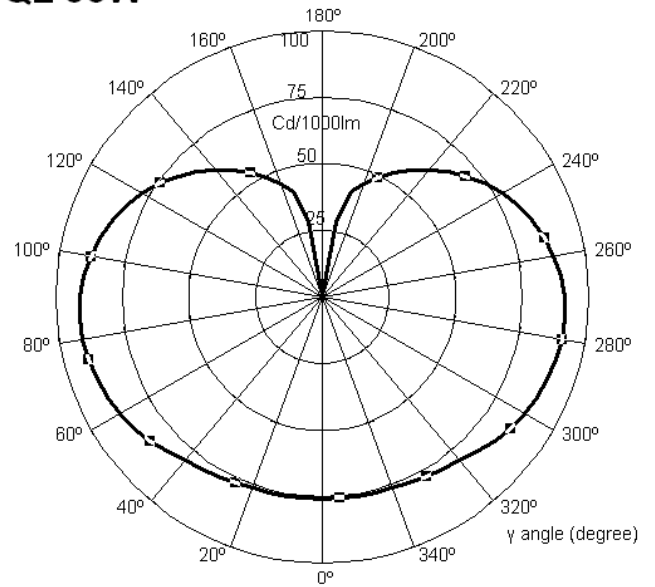


Figure 34 Light distribution QL 85W

QL 85W

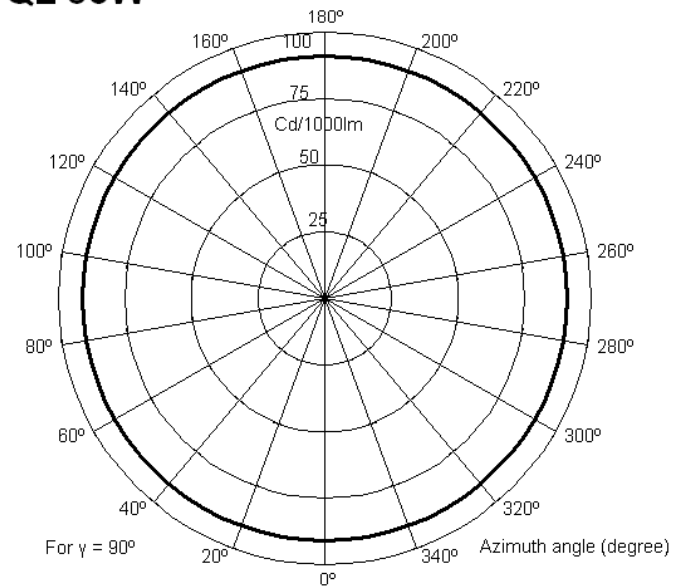


Figure 35 Azimuth angle QL 85W

gamma (degree)	Average lumen intensity (cd/1000lm)
0	65.5
5	65.6
10	65.7
15	66.1
20	66.6
25	67.3
30	68.3
35	69.8
40	71.7
45	74.1
50	76.8
55	79.5
60	82.3
65	84.9
70	87.2
75	89.0
80	90.3
85	91.1
90	91.5
95	91.4
100	90.9
105	89.8
110	88.3
115	86.3
120	83.8
125	80.8
130	77.5
135	73.8
140	69.9
145	65.9
150	62.0
155	59.4
160	54.0
165	49.1
170	37.9
175	3.54
180	0.22

Table 20 Luminous intensity QL 165W

See Figure 36 Light distribution QL 165W and Figure 37
Azimuth angle QL 165W

QL 165W

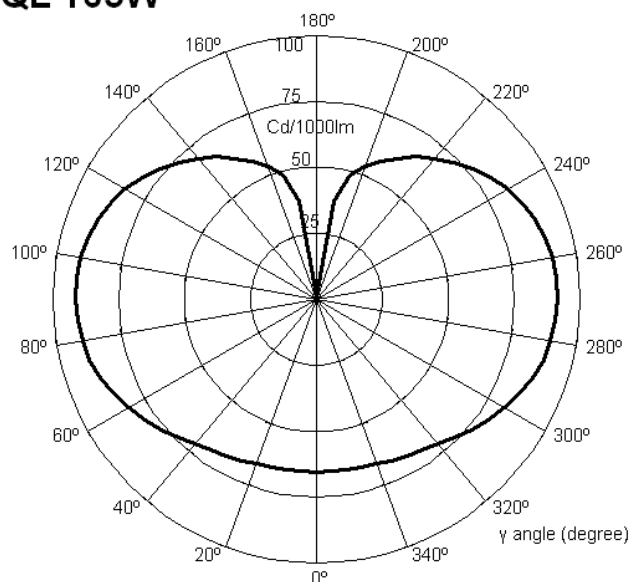


Figure 36 Light distribution QL 165W

QL 165W

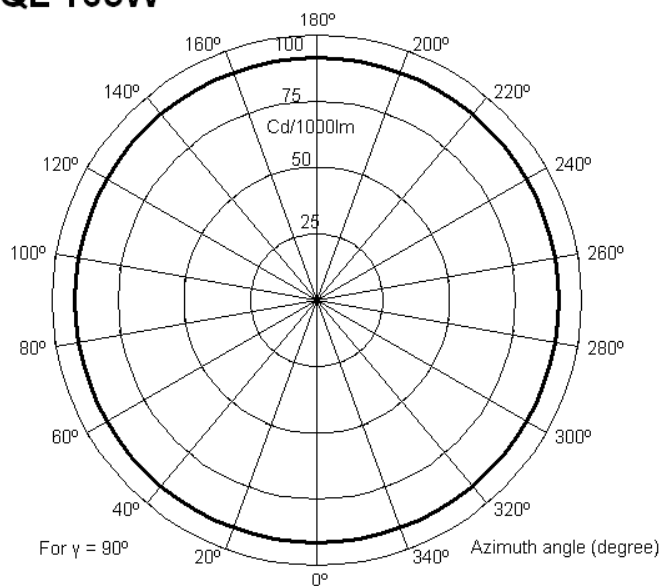


Figure 37 Azimuth angle QL 165W

5.3.4 Color characteristics

Table 21 presents the color characteristics of QL lamps at 100 hours.

Dimming of the QL lamp system will have a negligible effect on the color characteristics of the QL lamp system

QL 55W		2700	3000	4000	5000
Color rendering index CRI	Ra	>80	>80	>80	>80
Chromaticity coordinate	x	0.471	0.442	0.392	0.346
Chromaticity coordinate	y	0.416	0.404	0.385	0.359
SDCM max.	SDCM	5	5	5	5
P.E.T. (NIOSH)	h*klx	>24	>24	>24	>24
Damage factor	Dfc	<0.6	<0.6	<0.6	<0.6

QL 85W		2700	3000	4000	5000
Color rendering index CRI	Ra	>80	>80	>80	>80
Chromaticity coordinate	x	0.476	0.444	0.392	0.346
Chromaticity coordinate	y	0.417	0.404	0.385	0.359
SDCM max.	SDCM	5	5	5	5
P.E.T. (NIOSH)	h*klx	>24	>24	>24	>24
Damage factor	Dfc	<0.6	<0.6	<0.6	<0.6

QL165W		2700	3000	4000	5000
Color rendering index CRI	Ra	>80	>80	>80	>80
Chromaticity coordinate	x	0.472	0.435	0.388	0.346
Chromaticity coordinate	y	0.418	0.398	0.380	0.359
SDCM max.	SDCM	5	5	5	5
P.E.T. (NIOSH)	h*klx	>24	>24	>24	>24
Damage factor	Dfc	<0.6	<0.6	<0.6	<0.6

Table 21 Color characteristics of QL lamps at 100hours.

5.3.5 Effect of supply voltage fluctuations

5.3.5.1 Luminous flux, system power, system efficacy, system current

Due to the built-in pre-conditioner in the HF generator, the light output (luminous flux), the consumed power and the system efficacy of the lamp system vary by less than 2% as a result of mains voltage fluctuations within the specified permissible range. This also applies to the power factor of the system. The only parameter, which really changes, is the system input current. At lower supply voltages the system input current increases and consequently it will be reduced at higher supply voltages.

5.3.5.2 Color characteristics

There is no noticeable effect (visual or measurable) on the color performance (color temperature, color rendering, chromaticity coordinates etc.) due to supply voltage variations.

5.3.5.3 Typical spectral power distributions

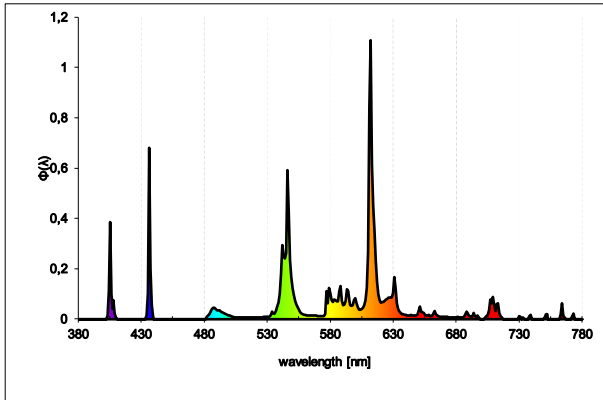


Figure 38 Spectral power distribution QL /2700

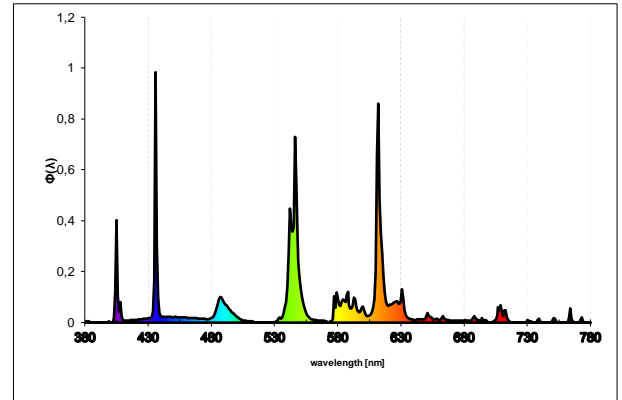


Figure 40 Spectral power distribution QL /4000

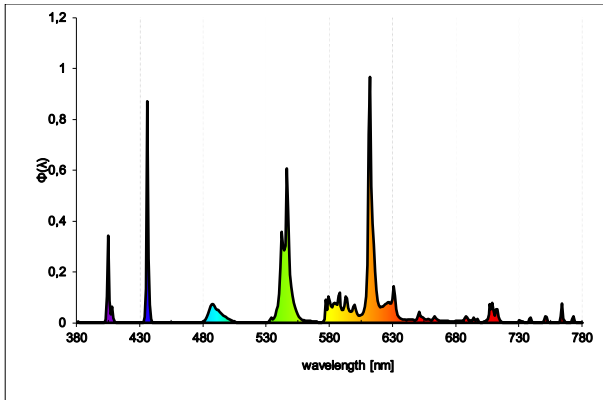


Figure 39 Spectral power distribution QL /3000

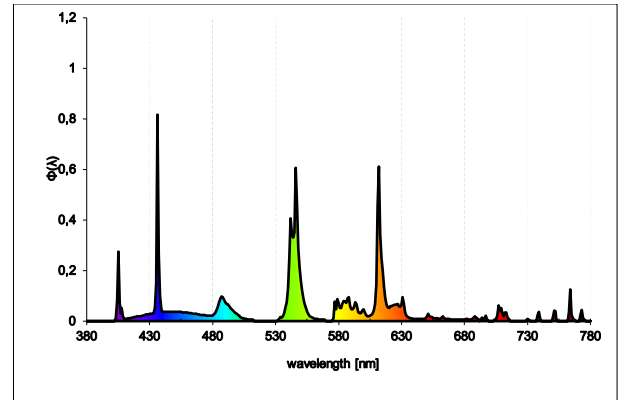


Figure 41 Spectral power distribution QL /5000

6. Lighting installation and environment

6.1 Electromagnetic compatibility

Electromagnetic compatibility, EMC, is the ability of a device or system to operate satisfactorily in its electromagnetic environment, without causing unacceptable interference in practical situations. QL lamp systems fulfill the requirements with regard to electromagnetic compatibility as laid down in European Norms EN 55015, EN 61000-3-2 and EN 61547.

6.1.1 Immunity

When the mains voltage deviates from its normal value by more than the tolerance permits (nominal voltage $\pm 10\%$), adverse effects on lamp life, HF generator life and light output can be expected. Excessively high voltages (U_{mains} e.g. $>350\text{V}$) over a considerable period of time (>48 hours) will damage the HF generator. Mains transients and dips, on the other hand, will not harm the HF generator, provided they are within the regulations of EN 61547.

6.2 Humidity

QL lamp systems have been tested for sensitivity to humid conditions and have proved to be able to resist a relative air humidity of up to 95%.

- Direct water ingress will damage the QL lamp system.
- The HF generator should be so mounted that no condensation or water from other sources can flow over or into the HF generator and power coupler.

6.3 Interference with infrared remote control equipment

Video and audio equipment, computers and also lighting installations nowadays are often operated by infrared remote control. The frequency of such infrared signals is in order of 36 kHz. To avoid any interference with this kind of equipment, the operating frequency of all QL lamp systems has been chosen to prevent any problems in the 36 kHz frequency range.

A dimmed QL system can have a negative effect on the operation of equipment (e.g. barcode scanners) operating around 16kHz.

6.4 Standards and approvals

QL lamp systems comply with all relevant international rules and regulations, including:

Safety	IEC 62532, IEC 61347-1 , IEC 62471
Performance	IEC 62639(in prep.), IEC 60929
Quality standard	ISO 9001
Environmental management system	ISO 14001

Interference LF

Mains current distortion	EN 61000-3-2
THD	ANSI C82.11-2002

Interference HF, measured with BU KGH085, equipped with one metal spacer between generator and power coupler plane, without metal gauze.

Conducted	EN 55015 & FCC class B, CFR 47 part 18
Radiated $<30\text{MHz}$	EN 55015 & FCC class B, CFR 47 part 18
Radiated $>30\text{MHz}$	EN 55022 class B & FCC class B, CFR 47 part 18

Electro Magnetic Immunity Performance criterion A of EN 61547.

Radiated radio frequency electro magnetic fields.
Test level 3

Conducted disturbances induced by RF fields
Test level 3

Power frequency magnetic fields

Fast transients
Test level 4
At maximum case temperature 2×2 minutes
(Also under no load condition)

Surge test.
Test level 4
At maximum case temperature 4×5 pulses.
Light flicker maximum 3 seconds is allowed above 1kV surges.

Mains Voltage Dips.
At maximum case temperature 70% of rated mains, 200ms

Mains Voltage Interrupt. At maximum case temperature 0% of rated mains 5ms executed with positive and negative half cycle.	EN 61000-4-11
ESD discharge test: Contact and air discharge.	EN 61547 clause 5.2
Mains transient 7 strikes Ringing Wave 100kHz, minimum 2.5kV	ANSI/IEEE C62.41.2
Safety	K123-1 (HV) EN61347-2-3 UL935
Approbations	CE, C-UL-US, KEMA (HV)
Environmental conditions	
Humidity	IEC 60068-2-30-Db 40°C 21 days cyclic operative 2hrs on, 10 hrs off.
Vibration	IEC 60068-2-6-Fc Frequency range 10-150Hz, Frequency change 1 oct/min Acceleration/amplitude 2G/0.15mm peak, 3 directions, test time 40 min per direction.
Bumps	IEC 60068-2-29-Eb Acceleration 10G Number of bumps 1000 /16ms 3 directions.
Shock test	IEC 60068-2-27 40G / 11ms (semi sinusoidal), 3 directions, 5 shocks per direction.
Temperature shock	IEC 60068-2-14-Na 5 cycles -40°C/+80°C 30 min 2 chamber method cycle. IEC 60068-2-14-Nb -20°C/100°C 2000 cycles.

The QL Company lamp system carries the CE marking on basis of fulfillment of the following standards: EN 61547, EN 61000-3-2 and EN 55015 (as tested in a Philips reference luminaire).

6.5 IP codes; dust and moisture protection

The QL lamp system is designed for built-in purposes in appropriate luminaires. Next to effective temperature control, the luminaire must also provide dust and moisture protection, especially for the HF generator part and the power coupler. Direct water intrusion or a high humidity causing condensation inside the HF generator and power coupler should be prevented, as should heavy dust accumulation. In practice, this means that QL luminaires applied in outdoor applications should be at least classified as IP 54.

The HF generators for the QL 55W, 85W and 165W lamp systems are classified as IP 40.

6.6 Lamp system disposal

At the end of their (economic) life, appropriate disposal of QL lamp systems or their components should take place according to the local applicable regulation.

6.6.1 The lamp

Although only a very small mercury dose is used, it is still recommended to treat the lamp system part as small chemical waste. The QL lamp can very well be recycled together with other low-pressure mercury discharge lamps. Follow local regulations for disposal of this type of light source.

6.6.2 The power coupler

Due to the fact that no materials are used in the construction of this part, which at present are known to be harmful to the environment, this part can be disposed of as normal waste. Disassembling is relatively easy, so recycling of materials is also possible.

6.6.3 The HF generator

This component is a RoHS compliant electronic device, which can be disposed with normal care. This part should be disposed as normal electronic waste, according to local regulations.

7. Service

7.1 General

Although QL lamp systems can be regarded as "light sources for life" because of their specified lifetime of 80,000 hours, it may nevertheless occur that parts of the system fail before this period is reached, due to internal or external influences. This does not mean that the total system has to be replaced but, depending on the failure, only a part of it. Failures that can occur are:

- a) breakage of lamp caused by external influences
- b) no light generation after switch-on or failure during operation

In case a) the (broken) lamp can easily be replaced by a new one. After removing the remaining parts of the vessel from the power coupler (see Figure 42), a new lamp can be installed by the unique twist base system to the bottom part of the power coupler (see Figure 5).

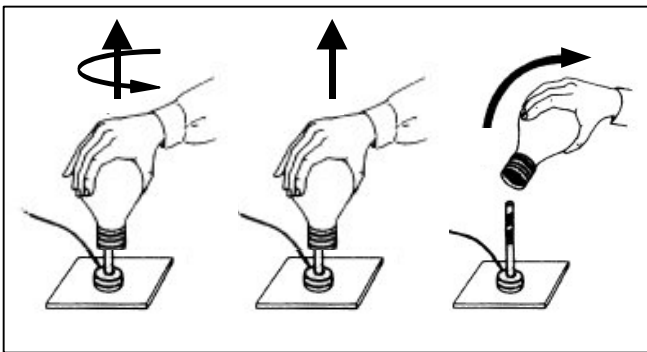


Figure 42 Release of lamp from power coupler

In case b) it will in most cases mean that the HF generator has failed, although there is also the possibility that the lamp has developed a leak or a contact breakage has occurred somewhere in the power coupler or the system wiring. Faultfinding can be performed using the attached Troubleshooting guide, see page 34.

Servicing must always be done with the QL lamp system disconnected from the supply voltage. Protective glasses should always be worn!

7.2 Luminaire measurement

As extra service we offer a free of charge luminaire measurement. The temperature household of the luminaire is compared with the requirements and if needed recommendations for improvement will be given. To make use of this service fill in the 'Luminaire measurement request form' (see page 31).

QL Luminaire measurement request

All Luminaire evaluations must be coordinated through your Sales Representative.

Please fill in this form for each QL luminaire sent for evaluation. Once you and the Sales Representative have completed the form it can be sent in with the luminaire and forwarded to:

USA: info@ql-inductionlighting.us

Rest of the world: info@qlcompany.com

Ship luminaires to:

USA

Nedap Light Controls
North America
Thomas Lang
14A Industrial Way
Atkinson NH 03811
USA

Rest of the world

QL Company B.V.
De Hoefse Weg 15
5512 CH Vessel
The Netherlands

QL Luminaire measurement request form

Date:

Manufacturer

Name:

Contact person:

Address.....

.....

.....

Phone Number:

Email:

Luminaire Name/Type:

Luminaire Model Number:

QL System Used: 55W / 85W / 165W / 165W dimmable

Voltage: 100-120V / 200-277V

Short description of how/where QL luminaire is/should be used
(examples: indoor/outdoor, geographical location...):.....

.....

.....

Ambient temperature range: Minimum: °C Maximum: °C

Project name:

Quantities involved in the project:

OEM Test Results:

Power:W

Ambient temperature:°C

Power coupler flange temperature:°C

Generator tc temperature.....°C

Amalgam temperature:°C

Comments:.....

.....

Is luminaire to be returned to the Manufacturer? YES / NO

Sales representative:

Contact person:

Address.....

.....

.....

Phone Number:

Email:

Please put a copy of your request in the packaging of the luminaire.

A test report will be provided upon completion of the evaluation.

QL Induction Luminaire Design Checklist

Lamp (Discharge Vessel) & Power Coupler	
	Lamp and power coupler are firmly attached to a heat sink plate with 4 bolts with a prescribed diameter, length & material (QL OEM Guide, Section 2.3 Earthing and fixation)
	Lamp is attached to the luminaire by the power coupler only; see that all click-fit mounting is correct and no metal parts touch the glass surface (QL OEM Guide, Section 1.2.3 The lamp & 2.7.4 Lamp holder / lamp base)
	The coax cable may not be crushed, i.e. the bending diameter is limited
	The temperature of the amalgam does not exceed 105°C (221°F, melting point of the amalgam) in base-up position (QL OEM Guide, Section 2.5.4 Permissible temperatures of amalgam)
	At the test point on the power coupler flange, the temperature does not exceed 100°C (212°F) for the QL lamp systems (QL OEM Guide, Section 2.5.3 Permissible temperatures of power coupler)
	Wire and mating plug-in connectors between the lamp assembly and generator (driver) must not be altered in any way and must be kept away from the surface of the lamp (the length of the coaxial cable cannot be altered and may not touch the bulb)

Generator (Driver)						
	Ambient temperature of the generator is kept as low as possible (QL OEM Guide, Section 2.5 Temperature measurements)					
	The bottom of the generator (largest surface area possible) is mounted flat against a large metallic surface of the luminaire					
	Test point temperature of the generator does not exceed the following values					
	t _{testpoint}	HF generators QL 55W		HF generators QL 85W		HF generators QL 165W
	72°C (161°F)	GE 05523000	QL 55W 200-277V	GE 08523000	QL 85W 200-277V	GE 16523000 QL 165W 200-277V
	72°C (161°F)	GE 05512000	QL 55W 100-120V	GE 08512000	QL 85W 100-120V	GE 16512000 QL 165W 100-120V
	72°C (161°F)	GE 05523001	QL 55W 200-277V /DIM 1-10V	GE 08523001	QL 85W 200-277V /DIM 1-10V	GE 16523001 QL 165W 200-277V /DIM 1-10V
	72°C (161°F)	GE 05512001	QL 55W 100-120V /DIM 1-10V	GE 08512001	QL 85W 100-120V /DIM 1-10V	GE 16512001 QL 165W 100-120V /DIM 1-10V
	Generator is properly earthed					
	Generator input leads and generator/lamp output leads are separated as much as is physically possible (minimum distance 10 cm) to minimize EMI (QL OEM Guide, Section 2.4 General wiring)					

Luminaire	
	The generator and power coupler are not mounted on a shared heat sink
	Wire and mating plug-in connectors are routed within the luminaire so as to comply with regulatory agency approvals
	The luminaire is always earthed
	High emissive surfaces are used to obtain a good heat transfer
	The luminaire is suitably sealed for outdoor application to prevent penetration of moisture, dust and insects
	The luminaire is designed or shaped in such a way that the maximum recommended temperatures of the QL lamp system parts are not exceeded (QL OEM Guide, Section 2.5 Temperature measurements)

OK	😊	OK/NOK	😐	NOK	😡	Not measured	?
----	---	--------	---	-----	---	--------------	---

Empirical approach designing a luminaire

Some design rules are:

- a to maximize (heat sink) conduction:
 - Get the internal ambient temperature (temperature inside the luminaire) as low as possible.
 - Use heat sink and housing material with a high heat transfer coefficient, for instance aluminum.
 - Maximize the heat sink cross sectional area in contact with the heat source.
 - Make good thermal contact between the heat sink and the heat source: flat mounting (mating) on untreated heat sink.
- b to maximize heat radiation from the heat sinks:
 - Get the internal ambient temperature (temperature inside the luminaire) as low as possible
 - Make the radiating surface area of the heat sink and the luminaire housing as large as possible, if possible with the aid of fins.
 - Achieve the highest emissivity as possible for the heat sink and luminaire, such as painting or anodizing.
- c to avoid heat absorption from the direct radiation from the lamp to the heat sink of the power coupler:
 - Shield the heat sink from the discharge vessel.
 - Paint the heat sink at the lamp side with a high reflecting material.
- d to avoid heat radiation from the lamp or from the heat sink of the power coupler to the generator:
 - Shield the generator and its heat sink from the other heat sources.
- e to minimize heat radiation from the housing to the inner side:
 - Insulate the inner side of the housing of the luminaire, except the mounting places of the (heat sinks of the) power coupler and generator.

Troubleshooting guide

If you experience troubles using QL Company induction lighting, please use this troubleshooting guide for a quick solution of your problem.



Problem	Page
System is inoperative	36
Very short system life	37
Low lamp light output	38
Light flickering	39

System is inoperative

Check		Action	See reference
Has the vessel been removed from the Power Coupler during operation?	yes	Switch the system off, place the vessel over the Power Coupler and switch the system on again.	
Is there power to the luminaire?	no	Correct external cause and check for normal operation.	
Are in-line fuses (or other devices such as photocells and sensors) blown, faulty, or causing the problem?	yes	Replace or reset the faulty component(s), and check for normal operation.	
Is the mains voltage in accordance with the voltage on the generator's label?	no	Use the correct generator.	
Are abnormal system conditions at fault?	yes	Replace the failed system part and check for normal operation.	(A)
Has the system failed under normal conditions?	yes	replace the failed system and check for normal operation.	(B)
Are the lamp, power coupler and generator compatible?	no	Replace the incorrect component(s) and check for normal operation.	(C)
Is the line voltage correct?	no	Correct the supply voltage to within the specified tolerance.	(E)
Problem solved?	no	Contact experts for further problem solving at info@qlcompany.com .	

Very short system life

Check		Action	See reference
Is the generator wired correctly?	no	Correct and check for normal operation.	(A)
Is the lamp broken	yes	Replace the failed system part and check for normal operation.	(A)
Are the components compatible?	no	Replace the incorrect component(s) and check for normal operation.	(C)
Is the line voltage correct?	no	Correct the supply voltage to within the specified tolerance.	(E)
Is the ambient temperature or system temperature high?	yes	Check temperature conditions and system mounting.	(F)
Problem solved?	no	Contact experts for further problem solving at info@qlcompany.com .	

Low lamp light output

Check		Action	See reference
Is there a low light output after first ignition?	yes	Wait 1 hour for normal operation.	
Is there a repeated low light output?	yes	Burn the lamps for 100 hours continuously.	
Is the generator wired correctly?	no	Correct and check for normal operation.	(A)
Is the light output decreasing over time?	yes	Refer to the system lumen maintenance over life.	(B)
Are the lamp, power coupler and generator compatible?	no	Replace the incorrect component(s) and check for normal operation.	(C)
Is the line voltage correct?	no	Correct the supply voltage to within the specified tolerance or correct tap connection.	(E)
Is the ambient temperature or system temperature high?	yes	Check temperature conditions and system mounting.	(F)
Problem solved?	no	Contact experts for further problem solving at info@qlcompany.com .	

Light flickering

Check		Action	See reference
Are abnormal wiring conditions at fault?	yes	Correct abnormal condition(s) and check for normal operation.	(A)
Has the system reached the normal end of life?	yes	Replace the system and check for normal operation.	(B)
Are the lamp, power coupler and generator compatible?	no	Replace the incorrect component(s) and check for normal operation.	(C)
Is the generator operating correctly?	no	Replace faulty generator and check for normal operation.	(D)
Is the line voltage correct?	no	Correct the supply voltage to within the specified tolerance or correct tap connection.	(E)
Are the lamp, power coupler and generator compatible?	yes	Correct abnormal condition(s) and check for normal operation.	(F)
Is the system temperature high?	yes	Check temperature conditions and system mounting.	(F)
Problem solved?	no	Contact experts for further problem solving at info@qlcompany.com .	

Reference (A)

Lamp base to power coupler contact	Good contact between the lamp base and the power coupler is essential. The lamp is attached to the luminaire by the power coupler only, check to see if the lamp is mounted on the power coupler correctly.
Faulty wiring	Check all 5 connections (earth, mains input, HF-output) on the generator for correct wiring, loose contacts, poor connections, or broken wiring. All generators must always be earthed. Generators and components may be earthed to the luminaire or otherwise connected to the earth. It is hazardous and possibly fatal for a human to make contact with an unearthed luminaire, generator or other electrical component while it is in operation.
Coaxial cable	The coaxial cable of the power coupler may not be crushed, i.e. the bending diameter is limited. The distance between the (coaxial) generator output cable and the generator input leads (mains cable) should be as big as possible, but at least 10cm (~4 inch). The wire and plug-in connectors between the power coupler and generator must not be altered in any way and must be kept away from the surface of the lamp.
Power coupler cooling	QL lamps are restricted to an optimum operating temperature. For example, lamp and power coupler should be firmly attached on a heat sink with 4 bolts with a prescribed diameter, length and material. Otherwise, the lamp may produce low light output or fail early. The generator and power coupler are not mounted on a shared heat sink.
Generator cooling	The bottom of the generator is mounted flat against a large metallic surface of the luminaire for good heat transfer. The generator and power coupler are not mounted on a shared heat sink.
Lamp damage due to handling or shipping	Damage to the system from handling or shipping may cause a crack in the glass or broken wires.

Reference (B)

Rated average life	Rated average life is based on tests of large groups of systems under specified conditions. All systems do not last until rated average life. They fail in accordance with a mortality curve.
Normal end-of life	Normal end-of-life is caused by failure from the power coupler and/or generator. The lamp will not be able to start.
System lumen maintenance	The light output of the QL system depreciates as the lamp accumulates burning hours. The degree depends on the lamp wattage and color.
Group replacement of systems	The interval between group replacements of systems is determined by the minimum acceptable light level for the application and economics. The light level will be determined by lumen maintenance of the lamp and dirt conditions, and the economics by the mortality curve, system and labor costs. Your system supplier has information for determining the best time schedule for your conditions.

Reference (C)

Incompatible components	These components could include an improper lamp, power coupler or generator. All components must be compatible. Check the system description and the stamps or labels on the lamp, power coupler and generator (package). System performance will not be according specifications. Lifetime behaviour is unpredictable.
-------------------------	---

Reference (D)

Improper generator wiring	Check the wiring diagram on the generator label.
Generator test	<ol style="list-style-type: none">1. Install a known good power coupler and lamp2. If the lamp lights normally, you have just corrected the cause of the problem.3. If the lamp does not light, the generator is inoperative. Replace the generator.
Power coupler test	<ol style="list-style-type: none">1. Install a known good generator and lamp2. If the lamp lights normally, you have just corrected the cause of the problem.3. If the lamp does not light, the power coupler is inoperative. Replace the power coupler.
Lamp test	<ol style="list-style-type: none">1. Install a known good generator and power coupler2. If the lamp lights normally, you have just corrected the cause of the problem.3. If the lamp does not light, the lamp is inoperative. Replace the lamp.

Reference (E)

Operating line voltage limits	<p>To receive the full benefits of rated lamp light output and to prolong generator life, it is essential that the voltage supplied to an installation be maintained within the prescribed limits. Low voltage has no damaging effect on the generator. It could, however, have an adverse effect on lamp performance and starting dependability. Subjecting a ballast to excessive voltage will cause early ballast failure.</p>
-------------------------------	---

Reference (F)

Temperature	A generator and a lamp, like any other electrical device, generate heat during normal operation. Planning for maximum heat dissipation with proper luminaire design, installation planning will minimize the possibility of a heat-related problem. Excessive temperature will have an adverse effect on the QL system life.
Temperature conditions	The temperature of the amalgam does not exceed 105°C (221°F) with a base-up angle less than 75°. The temperature of the bulb wall does not exceed 170°C (338°F). The temperature of the power coupler flange-test point does not exceed 100°C (212°F).
Generator and/or power coupler location	The generator and/or power coupler may be located in such a way that thermal contact and/or heat flow is limited. Bad thermal contact and/or low heat flow can result in an excessive lumen drop, lamp extinguishing, or even early failure of the system. Check the OEM Guide for proper mounting conditions.

More information about the QL systems can be requested at info@qlcompany.com.